

Programmer for flash micro computers

StickWriter

User's Manual



TESSERA Technology INC.
7th edition 10/2009

Table of Contents

| | |
|---|----|
| Chapter 1 Summary | 2 |
| 1.1 System Configuration | 3 |
| Chapter 2 Installation | 4 |
| 2.1 System Requirement | 4 |
| 2.2 Software Installation | 4 |
| 2.3 Driver Installation | 7 |
| Chapter 3 Hardware Specifications | 11 |
| 3.1 Switches and LED | 11 |
| 3.2 Target Interface Connector Specifications | 12 |
| 3.3 Target Cables | 13 |
| 3.4 Extension Adaptor | 14 |
| 3.5 FP4 Adaptor | 15 |
| 3.6 Target Board Cautions | 16 |
| 3.6.1 RESET | 16 |
| 3.6.2 FLMD0 | 17 |
| 3.6.3 SO/TxD, SI/RxD/DGCLK, SCK and H/S | 18 |
| 3.6.4 CLK/DGCLK | 20 |
| 3.6.5 VDD, GND | 20 |
| 3.7 Basic Specification | 21 |
| Chapter 4 StickWriter Operation using GUI Software | 22 |
| 4.1 Launching GUI Software | 22 |
| 4.2 Tool Bar | 24 |
| 4.3 Menu Bar | 25 |
| 4.3.1 [File] Menu | 25 |
| 4.3.2 [Programmer] Menu | 38 |
| 4.3.3 [Device] Menu | 42 |
| 4.3.4 [Help] Menu | 63 |
| Chapter 5 Additional License | 64 |

Chapter 1 Summary


StickWriter is a compact and lightweight type of flash writer used to write program data into a micro-computer with built-in flash memory.

It allows for both “on-board writing” in which the micro-computer is implemented on a customer-built board, or “off-board writing” in which the device is mounted on the IC socket of our SS board.

Since the 32-MByte flash memory is built into the body of the StickWriter, it allows the HEX files and the parameter files for each device to be saved. Therefore, “stand-alone operation” is possible, without requiring a PC when programming.

When operating as a “stand-alone” system, complete stand-alone operation is possible without requiring external power for the StickWriter.

1.1 System Configuration

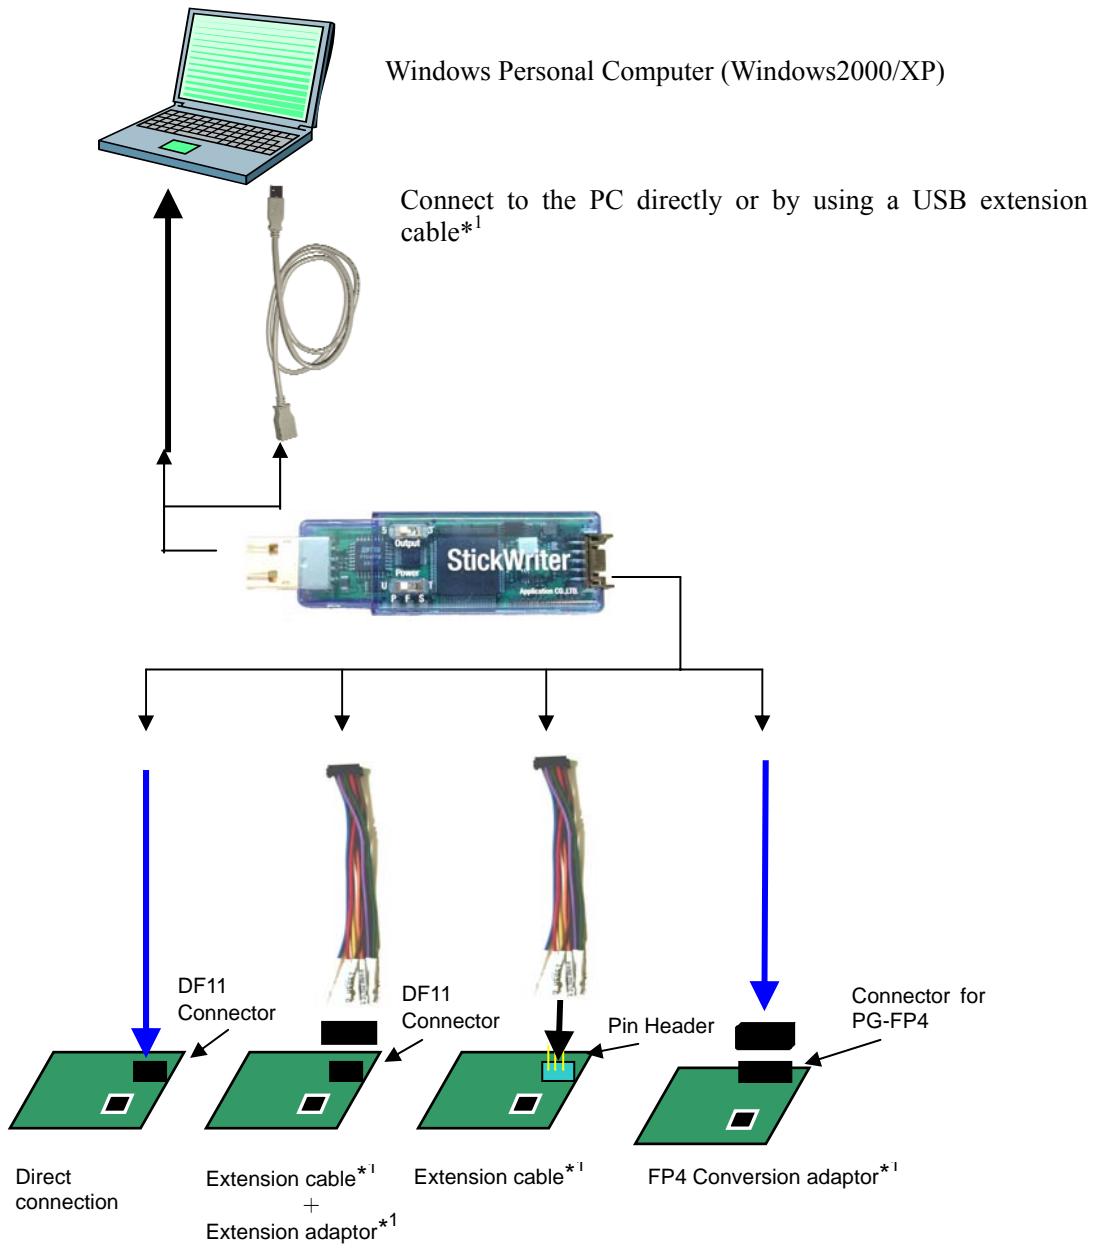

*1: Attachment for Standard Package


Chapter 2 Installation

2.1 System Requirement


| | |
|----------------|---|
| Host Machine | To use the StickWriter GUI, a PC running Windows2000 or Windows XP is required. |
| Host Interface | USB(Rev1.1/2.0) port is required. |

2.2 Software Installation


After inserting the StickWriter Installation CD into the CD drive, the following installer is launched automatically.

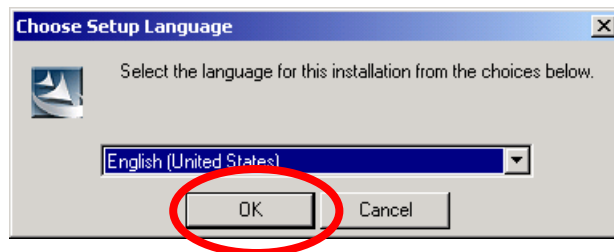


Click .

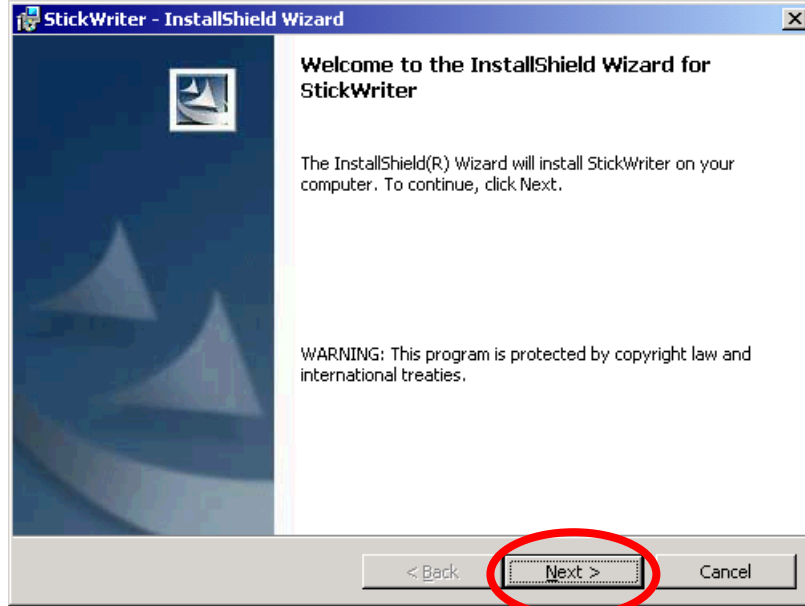


Click .

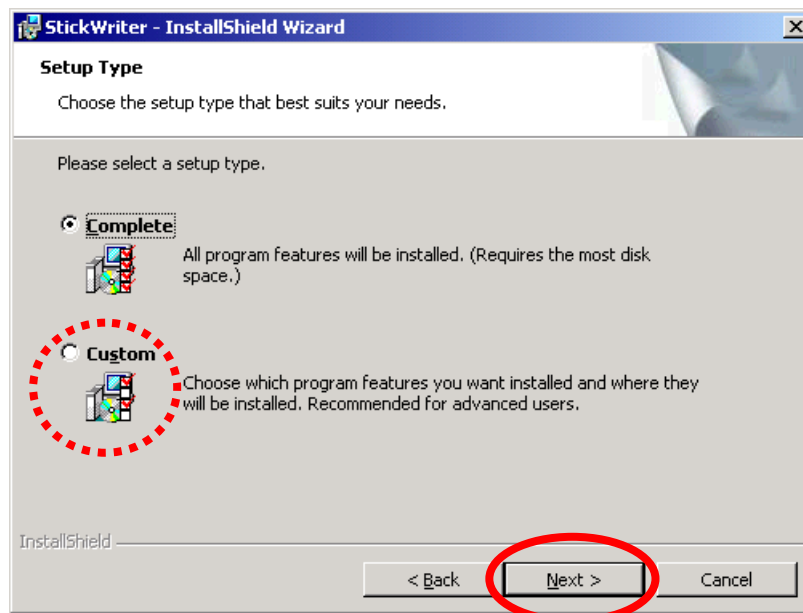

To change the install folder, click **Custom**.
Click **Next >**. Installation will start.

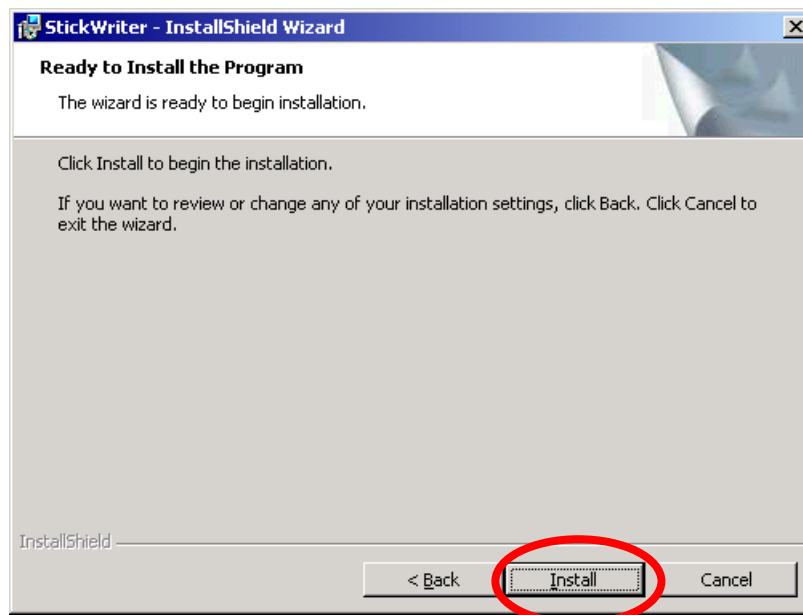


Click **Install**. Installation will start.

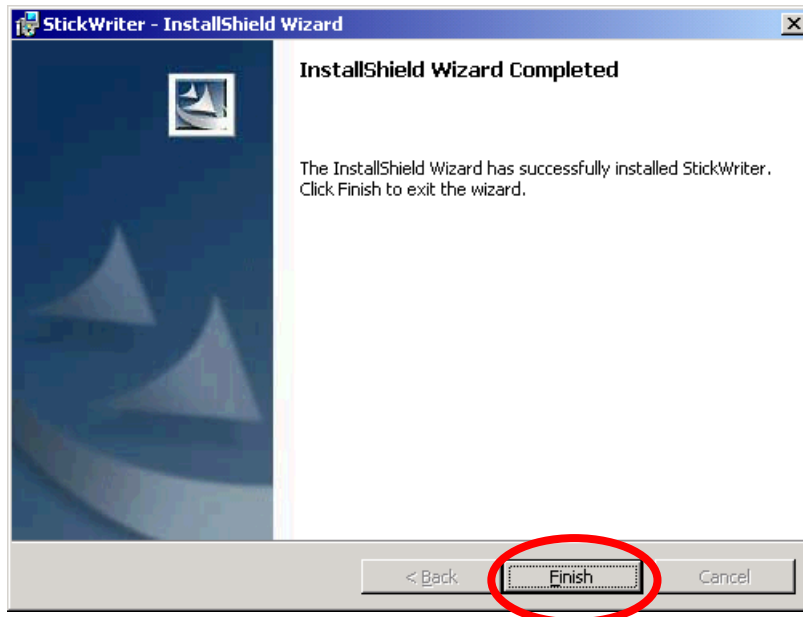


When installation finishes, the above window is displayed. Click **Finish**. The GUI for StickWriter has been installed.

2.3 Driver Installation


When StickWriter is first connected, the “New Hardware Detection Wizard” will be launched.

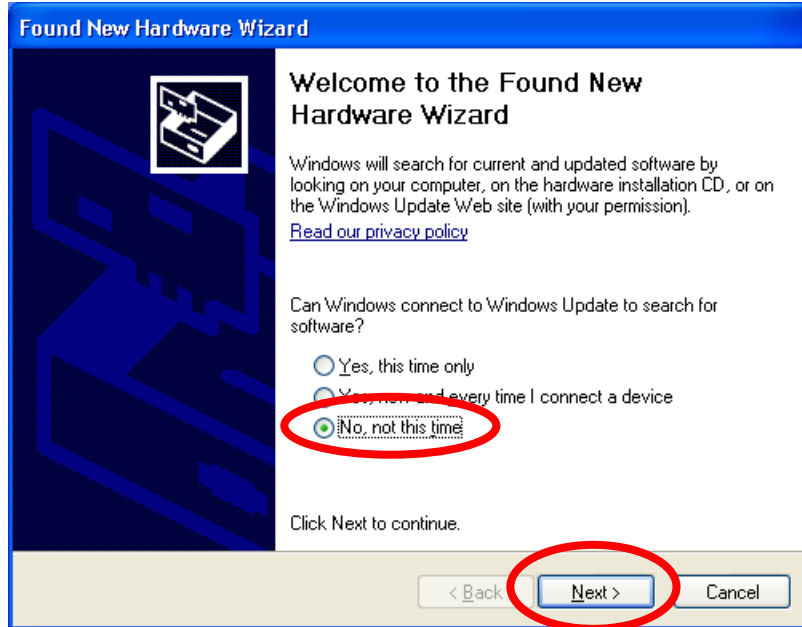


Since the driver for the StickWriter is not registered in Windows Update, select “No” and click .

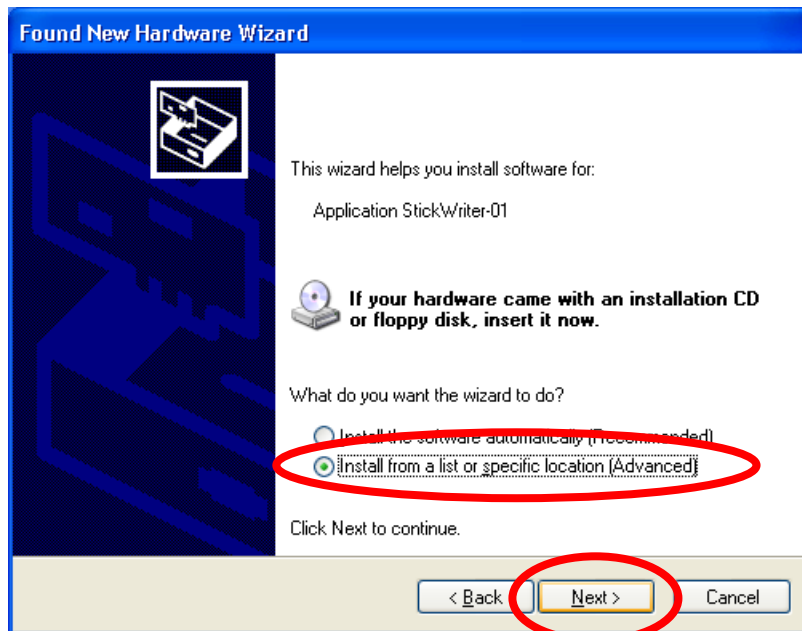


Select “Install from a list or specific location(Advanced)”, and click .

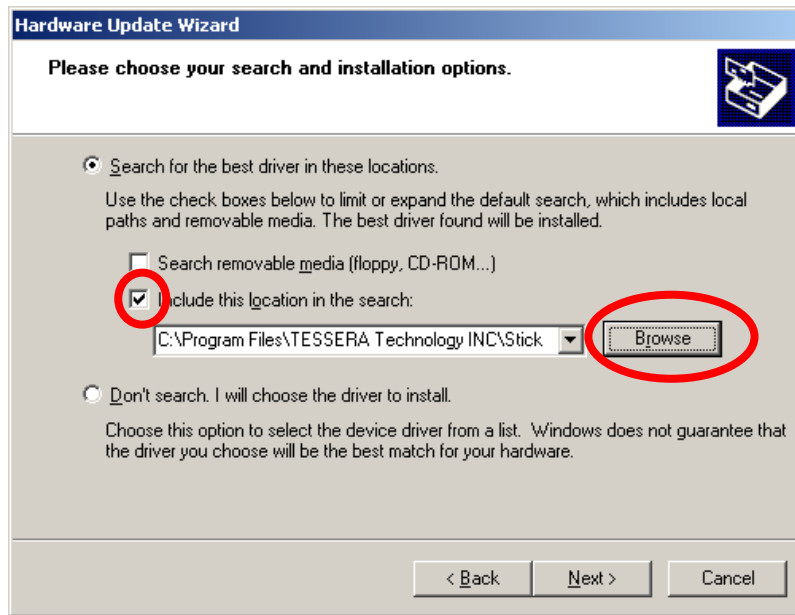


Check the “Include this location in the search:” and click **Browse**.

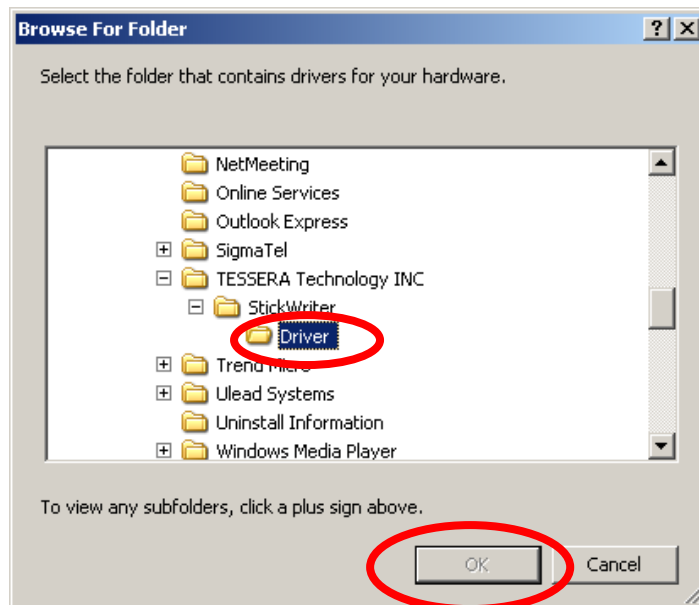


Select the “DRIVER” folder located in the folder where StickWriter was installed.

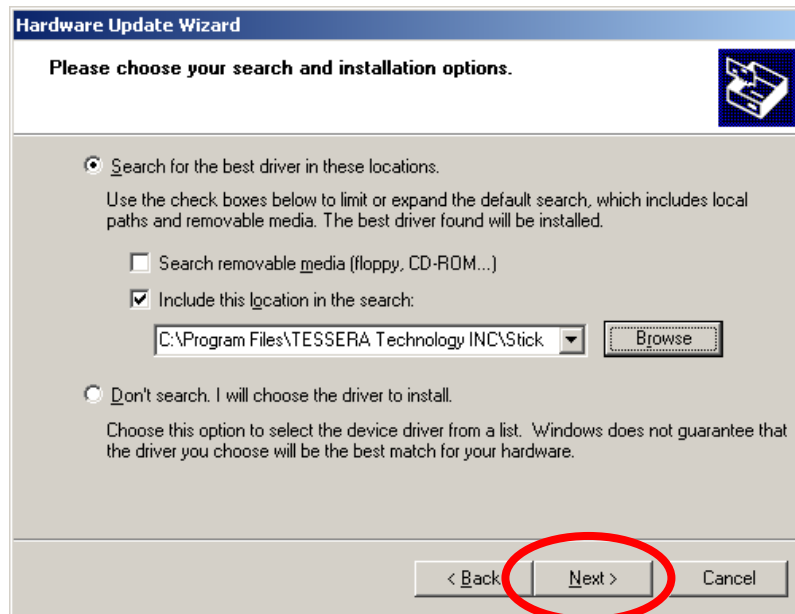

Click .

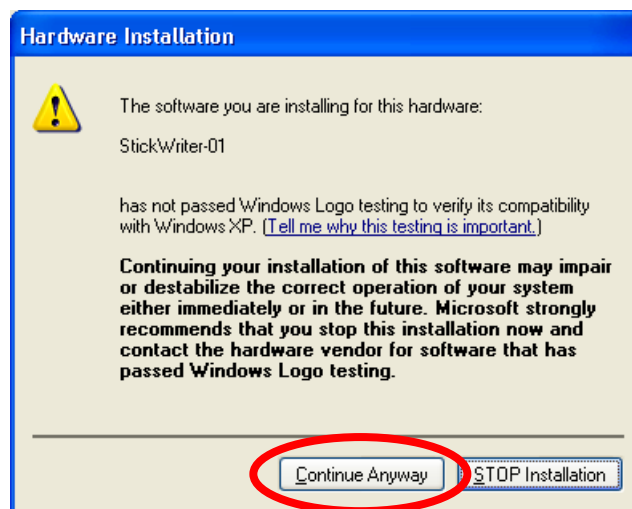


While installing the driver, the above message will be displayed. Click . This will not cause operation failure or system instability.

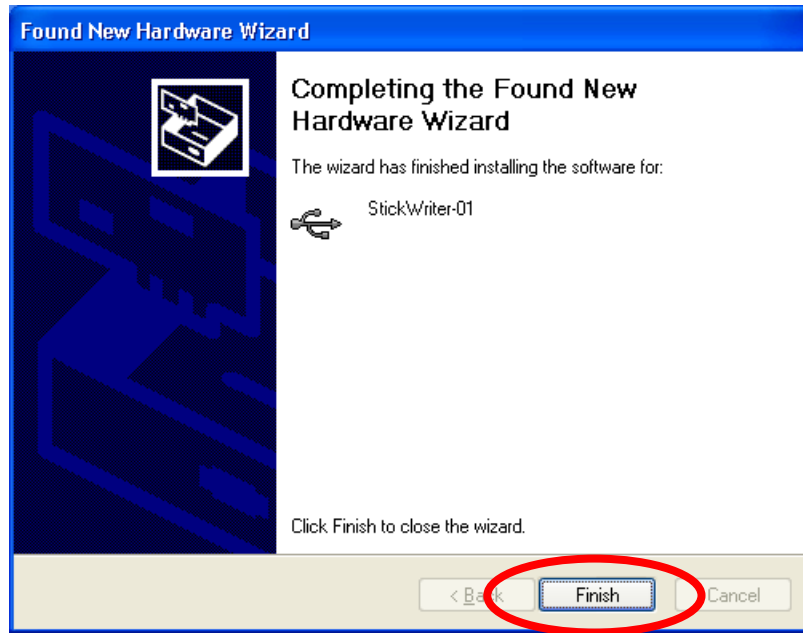

The driver installation is finished. Click **Finish**.

Chapter 3 Hardware Specifications

3.1 Switches and LED

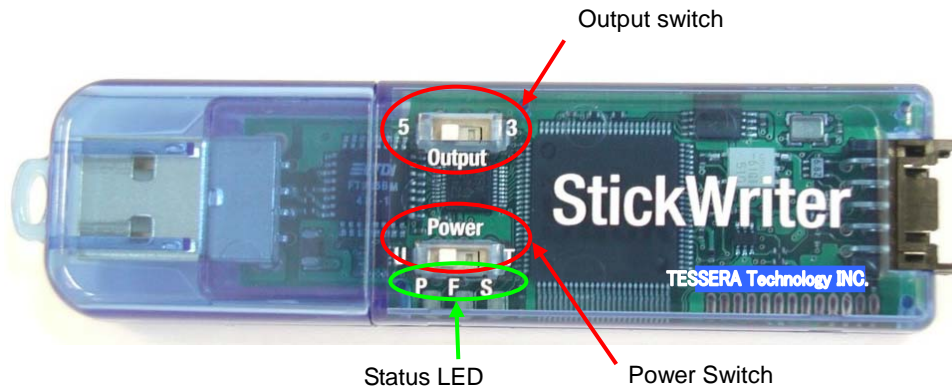

Output Switch

Specifies the voltage when power is supplied to the StickWriter.

| | |
|---|--|
| 5 | Approximately 5V Output (max 400mA). Outputs USB power from the PC. Note: In a standard USB, the power range is 4.75 - 5.25V (on the Host side). Also diodes are contained for protection, so the power voltage drops to 0.36V at maximum. |
| 3 | Output 3.3V (max 250mA). |

Power Switch

Specifies source of power supply to the StickWriter.


| | |
|---|---|
| U | Supplied by the USB. |
| T | Supplied by the target. The target voltage should be within 3.3V to 5V. |

Status LED

The status is shown on an LED display under the Power switch.

| | | |
|--------------|------|---|
| P Power | Blue | The light turns on when power is supplied to the StickWriter. The light turns on when communicating with the PC or with the target device. |
| F Fail | Red | The light turns on when communication with the target device fails. |
| S Success | Blue | The light turns on when a command to the target device is successful. |

3.2 Target Interface Connector Specifications

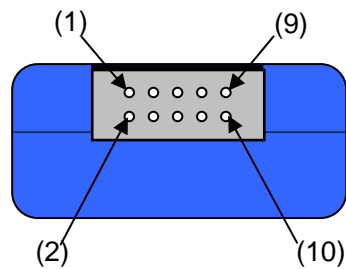

| Pin No | StickWriter Signal Name | Connection Point with Target CPU |
|--------|-------------------------|---|
| [1] | GND | VSS |
| [2] | \overline{RESET} | \overline{RESET} |
| [3] | SI/RxD/DGDATA | SO TxD DGDATA(X2) TOOL0 TOOLD0/TOOLD1 |
| [4] | VDD | VDD |
| [5] | SO/TxD | SI RxD |
| [6] | FLMD0 | FLMD0 |
| [7] | SCK | SCK |
| [8] | H/S | P _{xx} (HS) |
| [9] | CLK/DGCLK | X1 DGCLK(X1) TOOLC0/TOOLC1 |
| [10] | Reserved | |

StickWriter Side Connector Type No: DF11-10DP-2DS (Hirose Electronics)

Appropriate Target Side Connectors:

| | |
|--------------------------------|----------------|
| SMT Type | DF11CZ-10DS-2V |
| DIP Type | DF11-10DS-2DSA |
| Insulation Displacement Socket | DF11-10DS-2R26 |
| Clamping Socket | DF11-10DS-2C |

3.3 Target Cables



| Cape Specifications | | | Display Specifications | Connection Point with Target CPU |
|---------------------|--------|--------------------|------------------------|---|
| [1] | Black | GND | 1, GND | VSS |
| [2] | Brown | \overline{RESET} | 2, RESET | \overline{RESET} |
| [3] | Orange | SI/RxD/DGDATA | 3, SI/RxD/DGDATA | SO TxD DGDATA(X2) TOOL0 TOOLD0/TOOLD1 |
| [4] | Red | VDD | 4, VDD | VDD |
| [5] | Yellow | SO/TxD | 5, SO/TxD | SI RxD |
| [6] | Green | FLMD0 | 6, FLMD0 | FLMD0 |
| [7] | Blue | SCK | 7, SCK | SCK |
| [8] | Purple | H/S | 8, H/S | P _{xx} (HS) |
| [9] | White | CLK/DGCLK | 9, CLK/DGCLK | X1 DGCLK(X1) TOOLC0/TOOLC1 |
| [10] | None | | | |

Appropriate Header Pin Specifications: 0.64mm Length: 6mm

Recommended Connector: PS Series (Japan Aviation Electronics Industry, Limited.)

3.4 Extension Adaptor

An adaptor used for connecting through a target cable if StickWriter cannot connect due to implications of the framework, etc. Please connect all of the 9 cables, connecting pin1 of the pin header to pin1 of the target cable.



3.5 FP4 Adaptor

An adaptor used for converting to a connector for NEC Electronics PG-FP4/FP5.

When using SW-1, turn both 1 and 2 ON.

When using 78K0S/Kx1+ series, such as DGDATA and DGCLK, turn both 1 and 2 OFF.

When using 78K0R series, such as TOOL0, turn 1 ON and 2 OFF.

When using 78K0 series, such as TOOLC/D, turn 1 ON and 2 OFF.

| SW-1 | Others | 78K0S/Kx1+ | 78K0R | 78K0(TOOLC/D) |
|------|--------|------------|-------|---------------|
| 1 | ON | OFF | ON | ON |
| 2 | ON | OFF | OFF | OFF |




3.6 Target Board Cautions


3.6.1 RESET

When StickWriter wants to reset the target CPU, it outputs “Low”.
When StickWriter wants to cancel the reset, it changes to “Hi-Z”.

When there is no external reset circuit

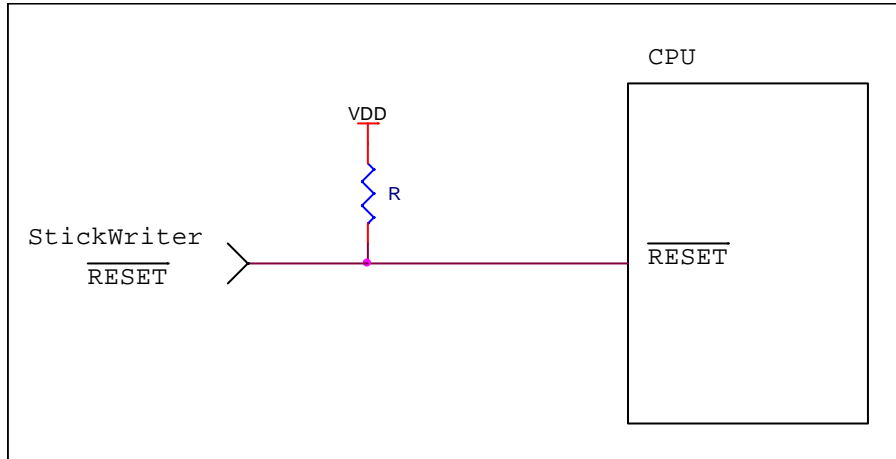

When there is an external reset circuit

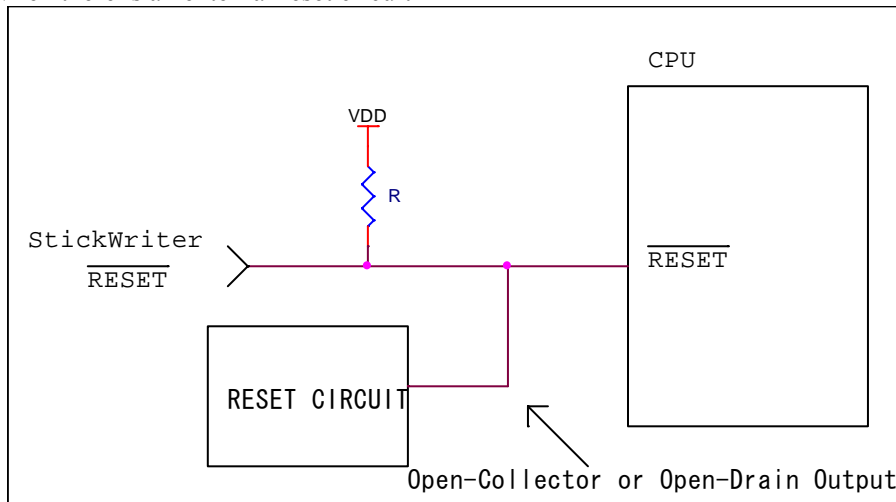

Set the external reset circuit as Open-Collector or Open-Drain output. Set the Wired OR Connection with the reset signal from StickWriter. Be sure that reset will not occur while writing to the target CPU from StickWriter. Be cautious when using an external watch-dog timer.


3.6.2 FLMD0

A pulse is output from StickWriter to determine the communication method.

Perform the “pull-down” process on the target board.

The “pull-down” processing is unnecessary in the device of 78K0R series because there is “pull-down resistance” in the inside.

If the target CPU has an FLMD1 port, perform the “pull-down” process and maintain “Low” level while StickWriter is being connected.

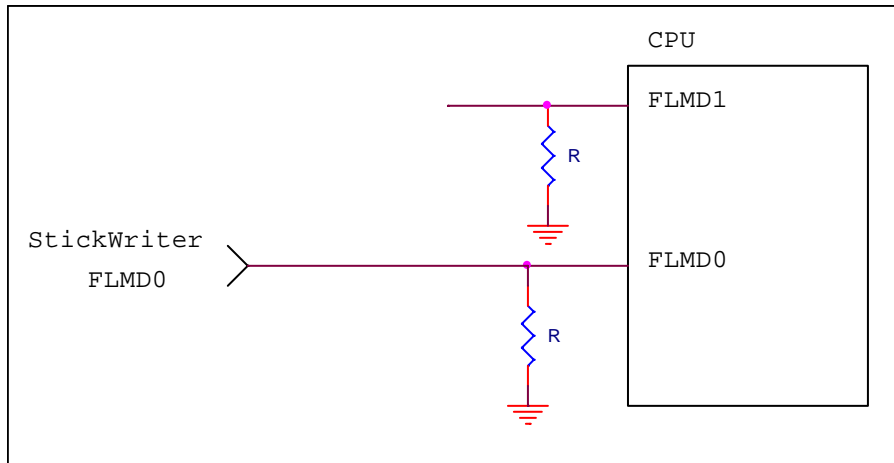

3.6.3 SO/TxD, SI/RxD/DGCLK, SCK and H/S


The StickWriter is in communication with the target CPU.

When external devices are connected to the ports, be cautious not to inhibit communication. Keep in mind that external devices may malfunction due to communication data with the StickWriter.


It is not necessary to perform processes for unused ports on StickWriter.

| | |
|---------------|---|
| SO/TxD | Output from StickWriter |
| SI/RxD/DGDATA | Output from Target CPU for SI/RxD. Input/Output for DGDATA/TOOL0/TOOLD0/1. |
| SCK | Output from StickWriter |
| H/S | Output from Target CPU |




For clock-synchronized communication (H/S is optional)

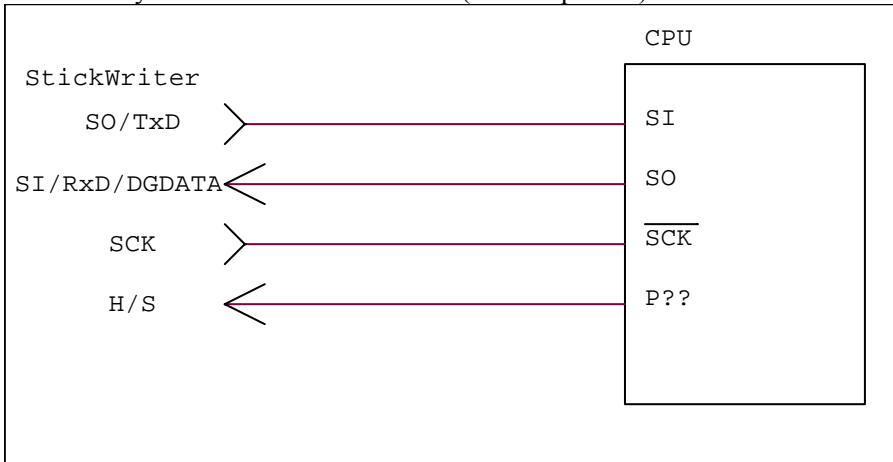

For UART communication

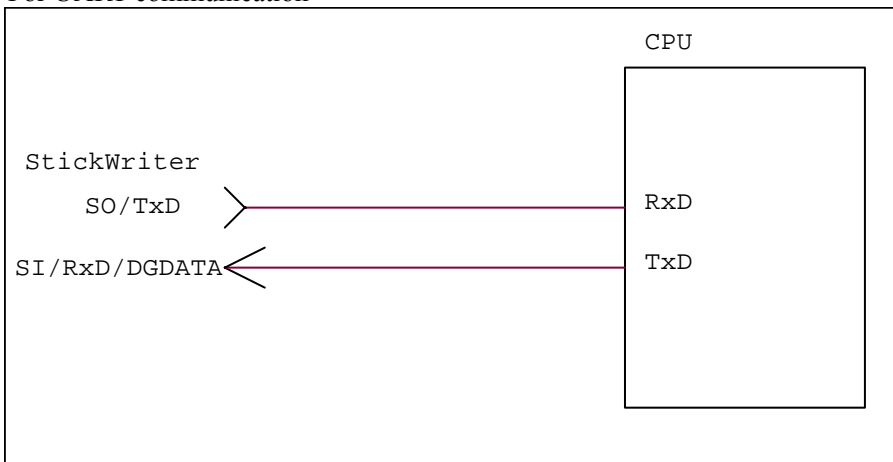

For Single Wire UART

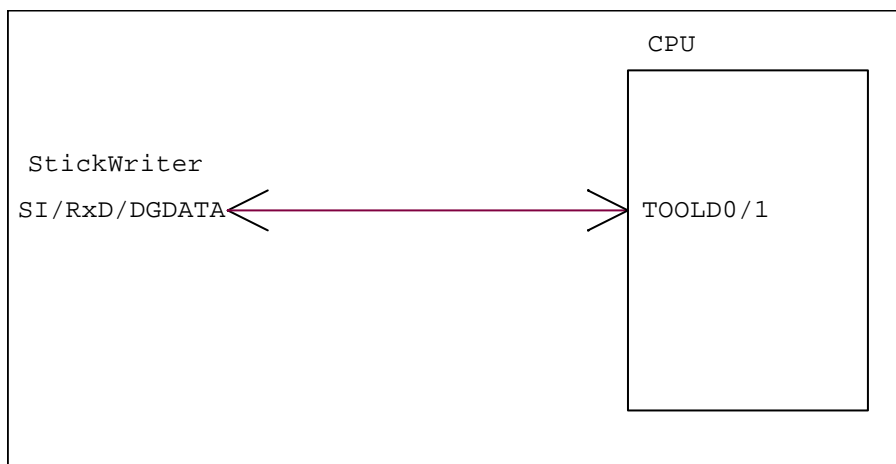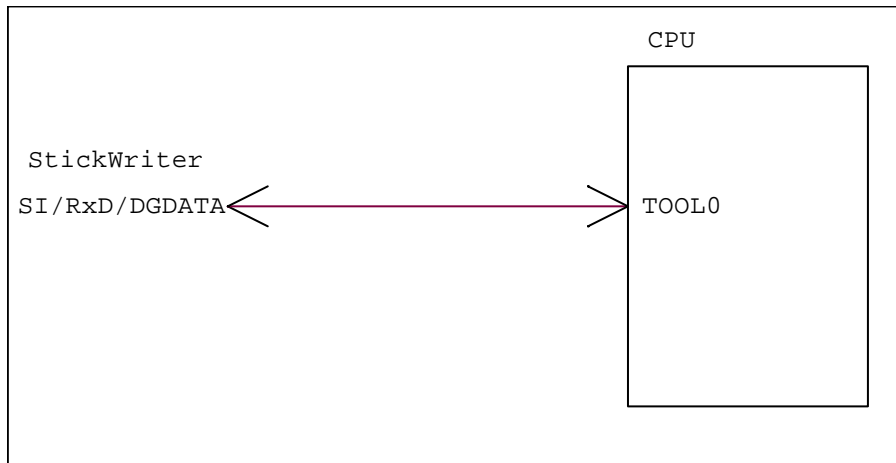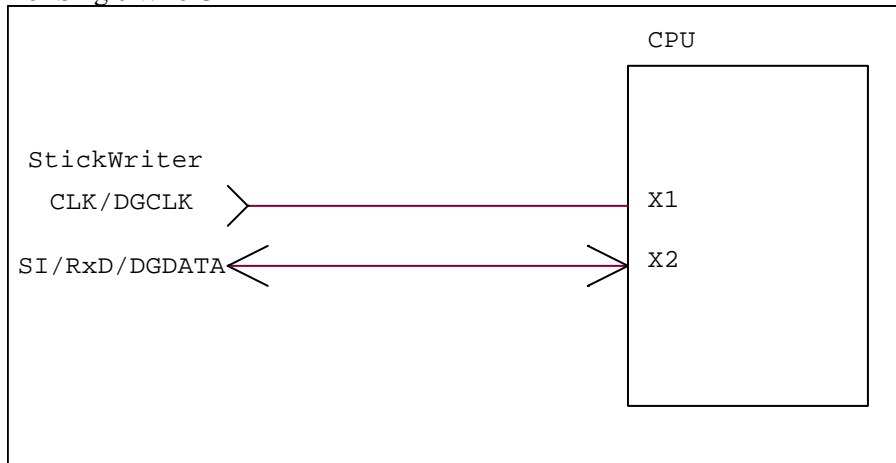

3.6.4 CLK/DGCLK

Outputs the clock.


Connection is not necessary if a CPU operation clock, such as an oscillator, is supplied on the target board.

It is necessary to connect the device with TOOLC0/1.

3.6.5 VDD, GND

Connect to the I/O voltage of the target CPU.

If the CPU has multiple I/O voltages, connect the voltage equal to the port in communication with StickWriter.

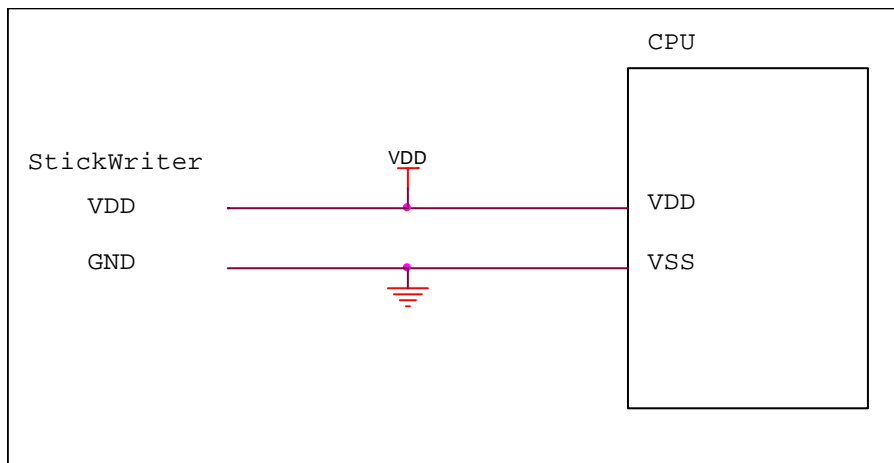

3.7 Basic Specification

| | | |
|--------------------------------|-------------|---|
| Built-in data memory | | 32MByte(NAND Flash: with ECC process) |
| Supported communication method | | UART, clock synchronizer SIO (with/without H/S) |
| Target voltage | | 1.65V - 5.5V (For under 3.3V, power supply is required from USB) |
| Interface | PC side | USB 2.0/1.1 (Bus/power operation) |
| | Target side | Hirose Electronics DF11 series |
| Voltage capable for output | | 5V / 3.3V |
| Power Supply | | PC / Target board (3.3V - 5.5V) |
| Consumption current | | Maximum 80mA |
| Body size | | W87 × D23 × H12 (mm) |

Chapter 4 StickWriter Operation using GUI Software

4.1 Launching GUI Software

(1) System Connection

Connect StickWriter to the PC that the StickWriter GUI program was installed in.

(2) Launching the GUI Software

Select [Program (P)]->[StickWriter]->[StickWriter] from the Windows Start menu.

Initialize the GUI software by initiating communication with the StickWriter firmware. If the initialization process was successful, the window shown in Fig. 1 will be displayed.

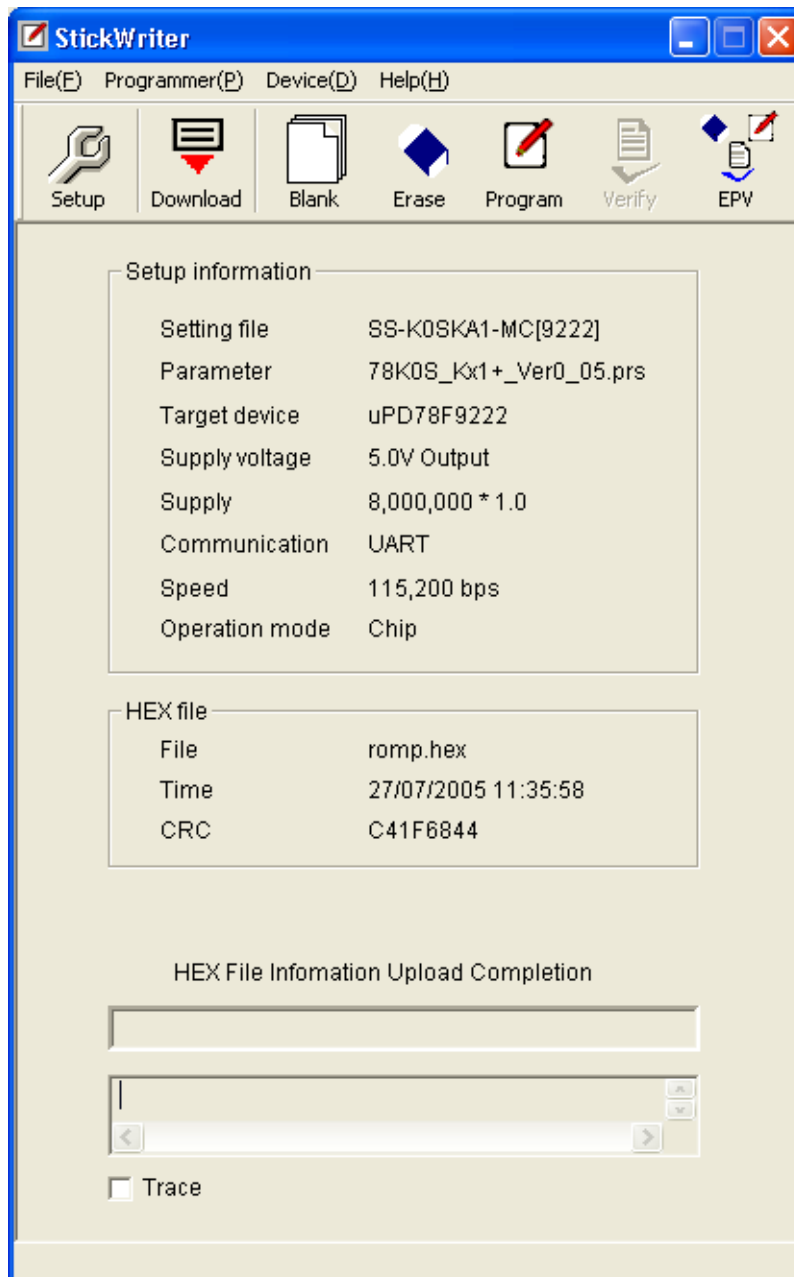


Fig 1

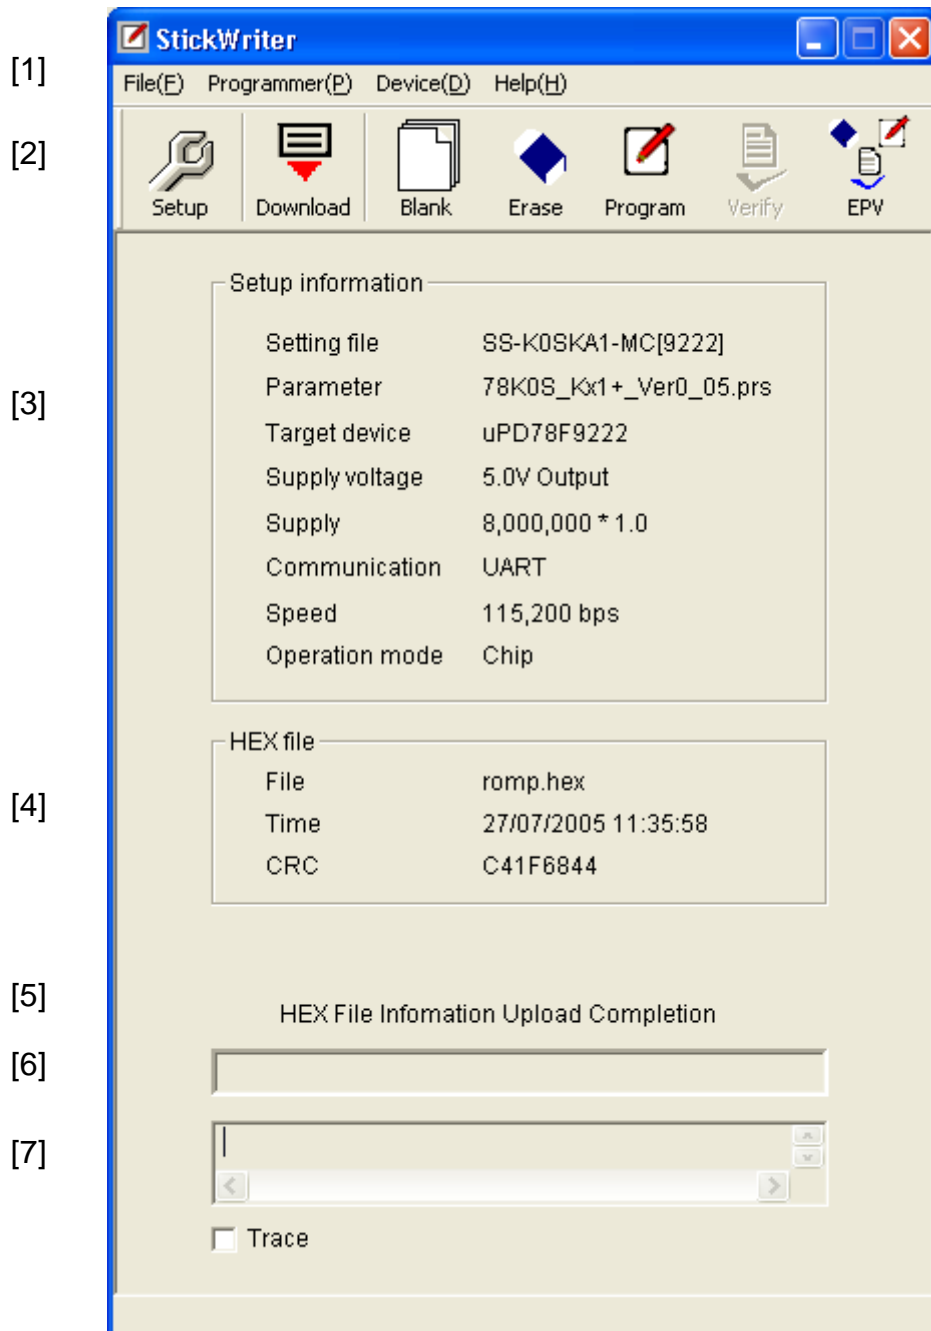


Fig 2

(3) Configuration of the Windows Screen

- [1] Menu Bar (Displayed on top)
- [2] Tool Bar (Displayed under the menu)
- [3] Setup Information section
- [4] HEX File Information section
- [5] Status Display section
- [6] Progress Status Display section
- [7] Trace Display section

* Setup displays the information from the default setting file.

4.2 Tool Bar

The Tool bar consists of a set of buttons that initiate important operations in StickWriter.



[Device] - [Setup] button



[File] – [HEX File Download] button



[Device] – [Blank Check] button



[Device] – [Erase] button



[Device] – [Program] button



[Device] – [Verify] button



[Device] – [EPV] button

4.3 Menu Bar

Depending on the status and type of the actual device, some menus may not be applicable.

4.3.1 [File] Menu

Clicking the [File] menu will display a pull-down menu.

The menu consists mainly of commands for file operations.

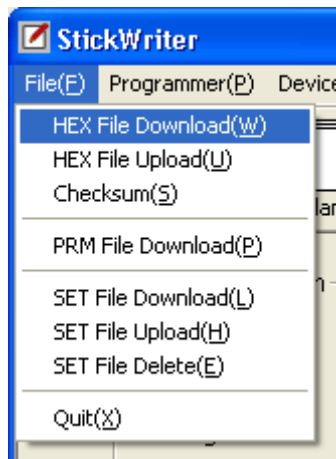


Fig 3

(1) [HEX File Download] Menu



You can select a HEX file to be written and download it to the flash memory in StickWriter. The downloaded HEX file can be written into the flash memory of the target device by executing program commands or EPV commands.

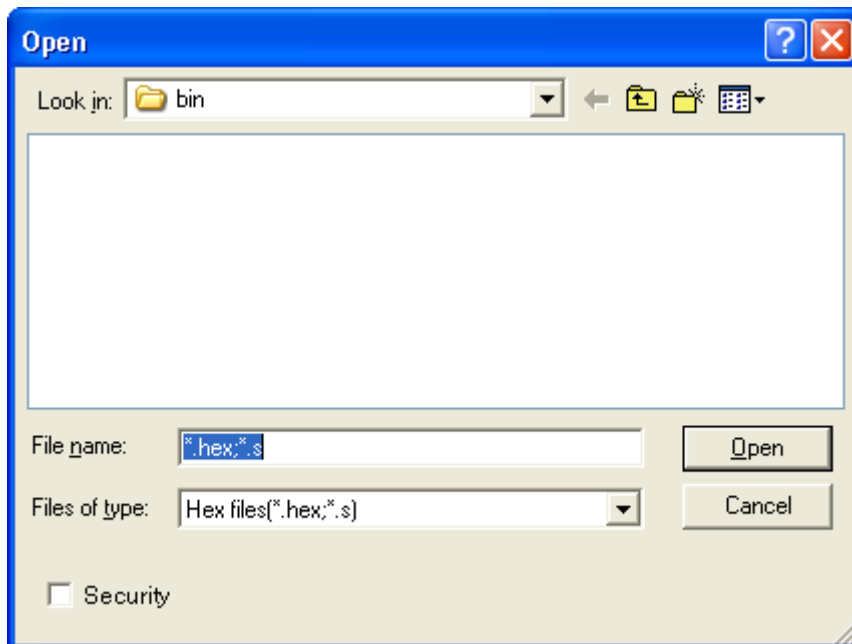


Fig 4

[Open]

The selected HEX file will be downloaded to the flash memory in StickWriter. The result of the download will be displayed in the HEX File information section in the window shown in Fig 2.

[Cancel]

Closes the window without downloading the selected HEX file.

By checking “Security” in the lower left corner, the downloaded HEX file cannot be uploaded to the host machine.

(2) [HEX File Upload] Menu

Upload the HEX file that was downloaded on the StickWriter to the host machine.

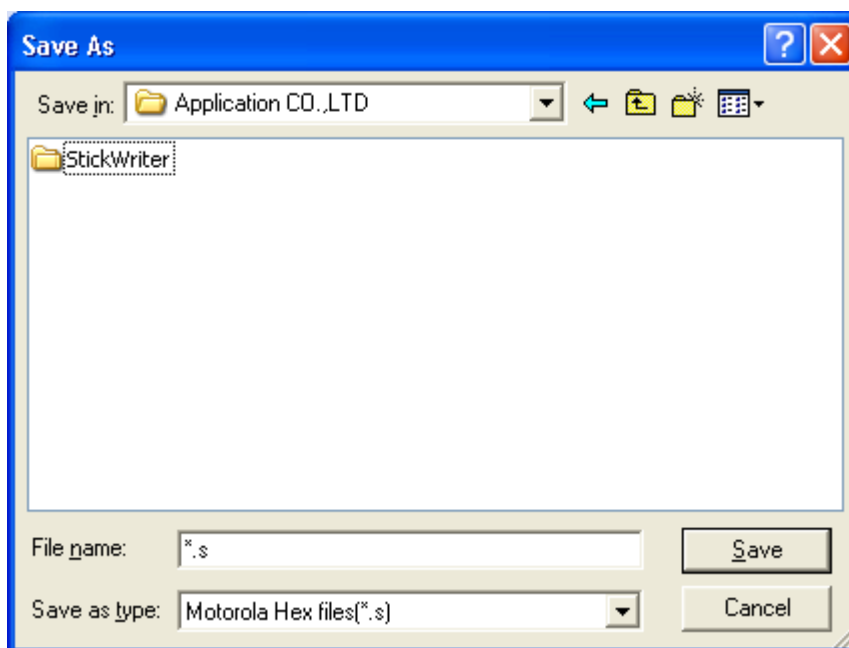


Fig 5

[Save]

Input the file name and press the Save button to start uploading. It will be saved in Motorola S format.

[Cancel]

Closes the window without uploading the HEX file.

(3) [Checksum] Menu

The checksum value of the HEX file downloaded to the flash memory of StickWriter is displayed.

Device Checksum : It is a value calculated by the same algorithm as the target device.

FP4 Algorithm : It is a value calculated by the same algorithm as programmer "PG-FP4" made of NEC Electronics.

CRC sum(32bit:1M) : It is a value when Program Area of PG-FP4 is set to 1MByte.

CRC sum(32bit:2M) : It is a value when Program Area of PG-FP4 is set to 2MByte.

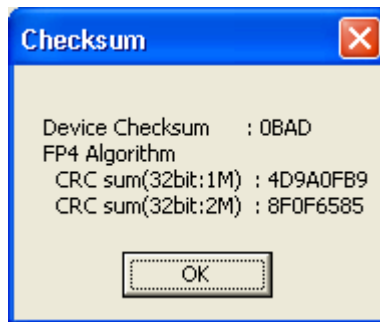


Fig 6

(4) [Parameter File Download] Menu

Select a parameter file to enable downloading to the StickWriter's flash memory. The number of licenses purchased will determine the number of files permitted for downloading.

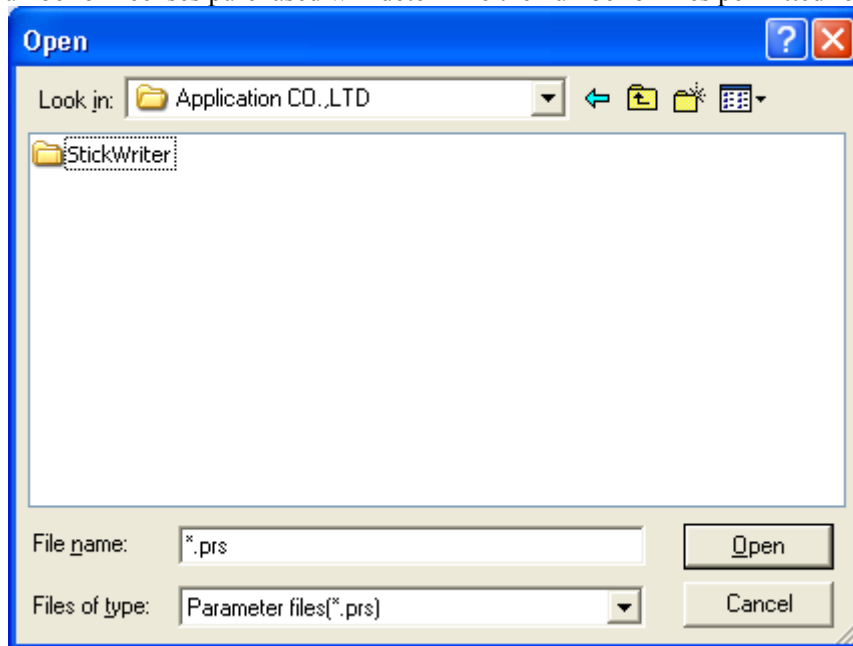


Fig 7

[Open]

Downloads the selected parameter file.

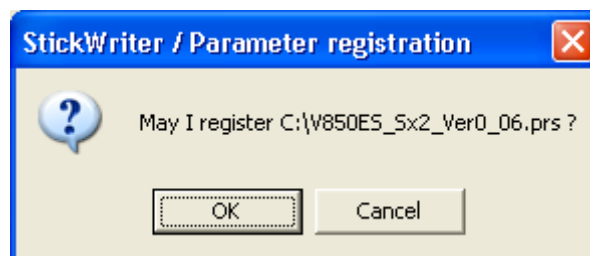


Fig 8

Press [OK] to display the license confirmation window or update confirmation window.

For new registration

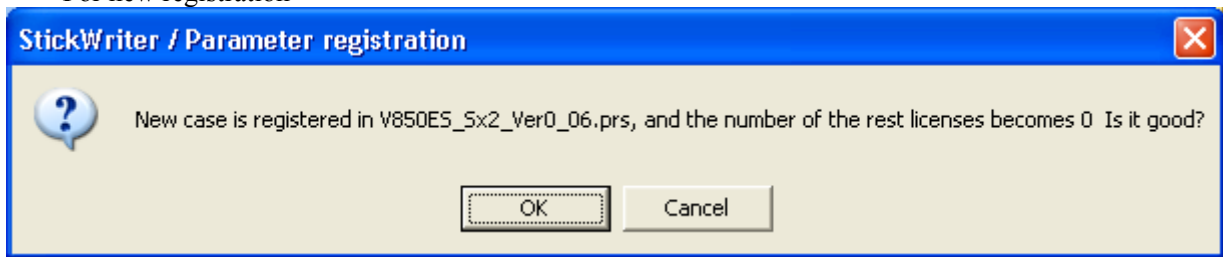


Fig 9

For registration update

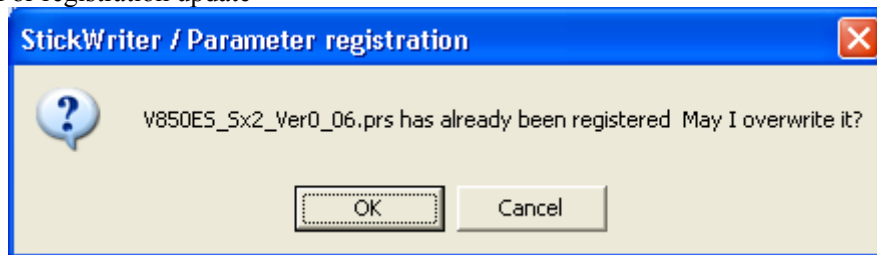


Fig 10

The selected parameter file will be downloaded to the flash memory in StickWriter.
The latest parameter files can be downloaded from our website (<http://www.tessera.co.jp>).

[Cancel]

Closes the window without downloading the selected parameter file.

(5) [Setting File Download] Menu

Select a setting file for download to the StickWriter's flash memory.

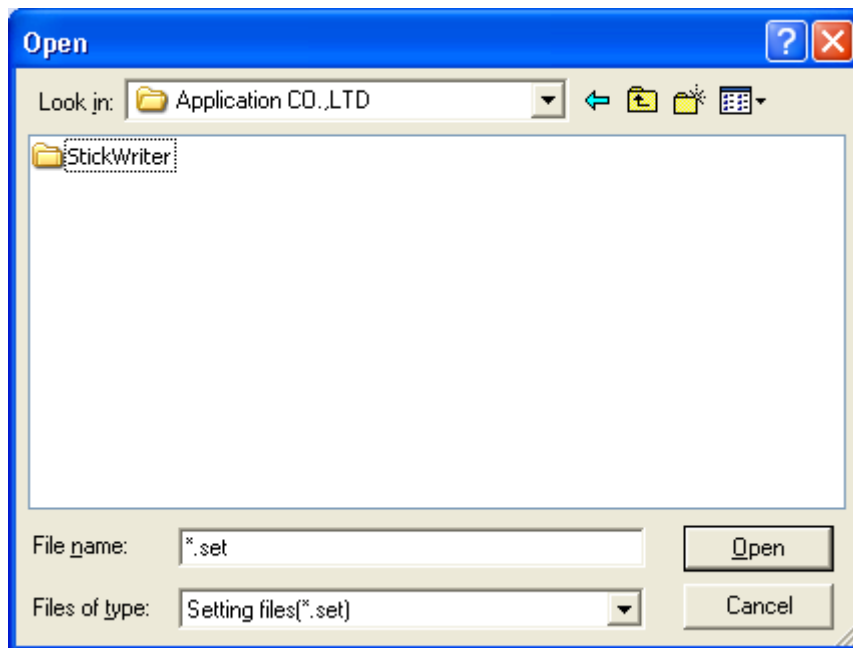


Fig 11

[Open]

Downloads the selected setting file to StickWriter.

[Cancel]

Closes without downloading the selected setting file.

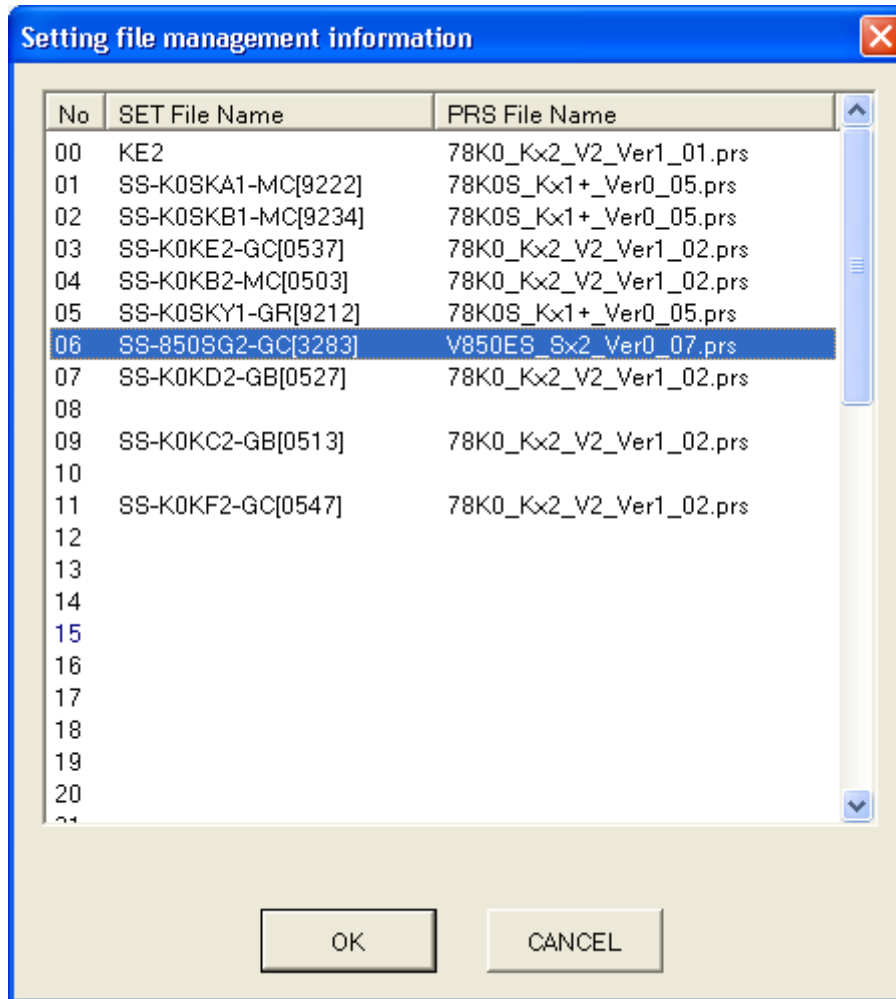


Fig 12

Select a number to download and press [OK].

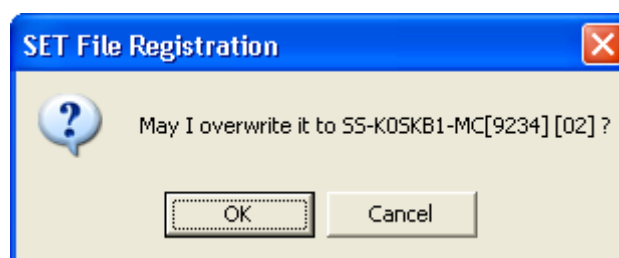


Fig 13

Confirm the destination of the download and press [OK] to start downloading.
 If the specified location is the default setting (in the case of overwriting), the warning window shown in Fig 14 will be displayed and the download will not start.

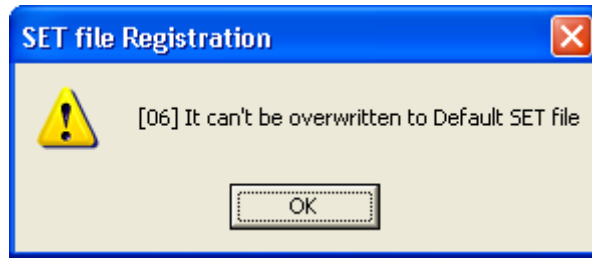


Fig 14

The downloaded setting file will become the default setting file. (This will be reflected in the Setup information section in Fig 2.)

- (6) [Setting File Upload] Menu
Upload the setting file from StickWriter to a specified location in the host machine.

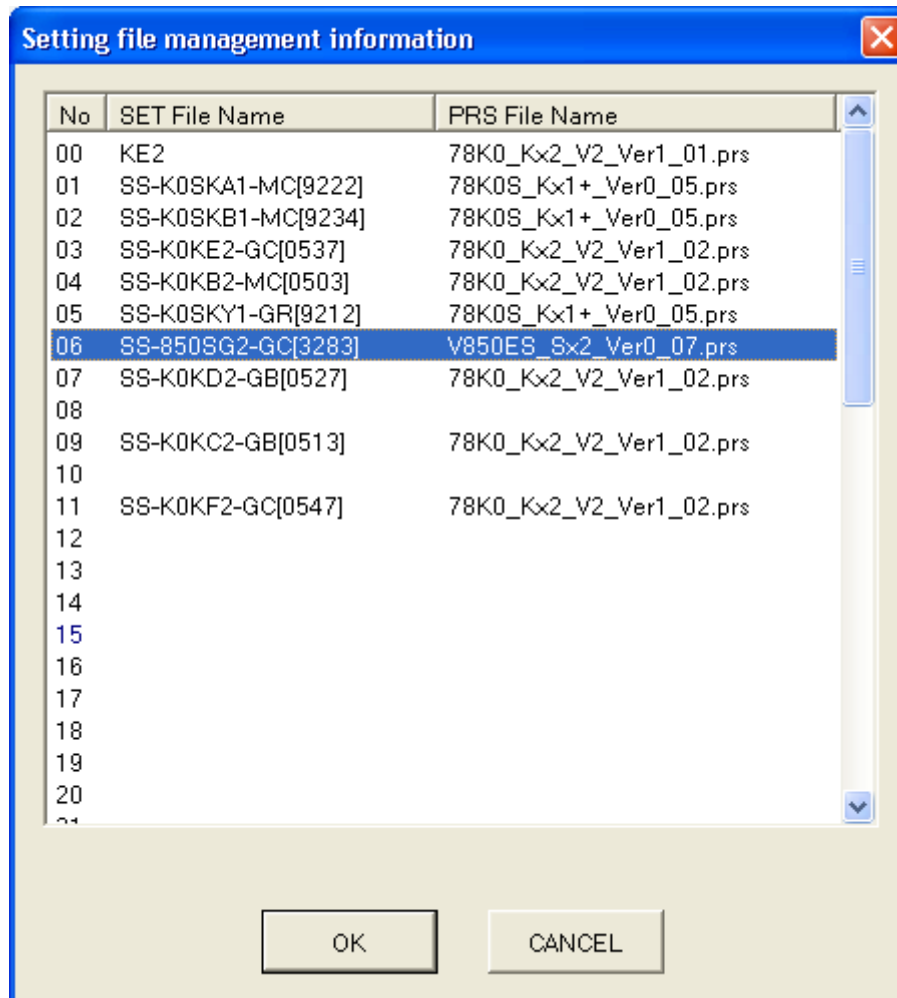


Fig 15

Select a number to upload and press [OK].

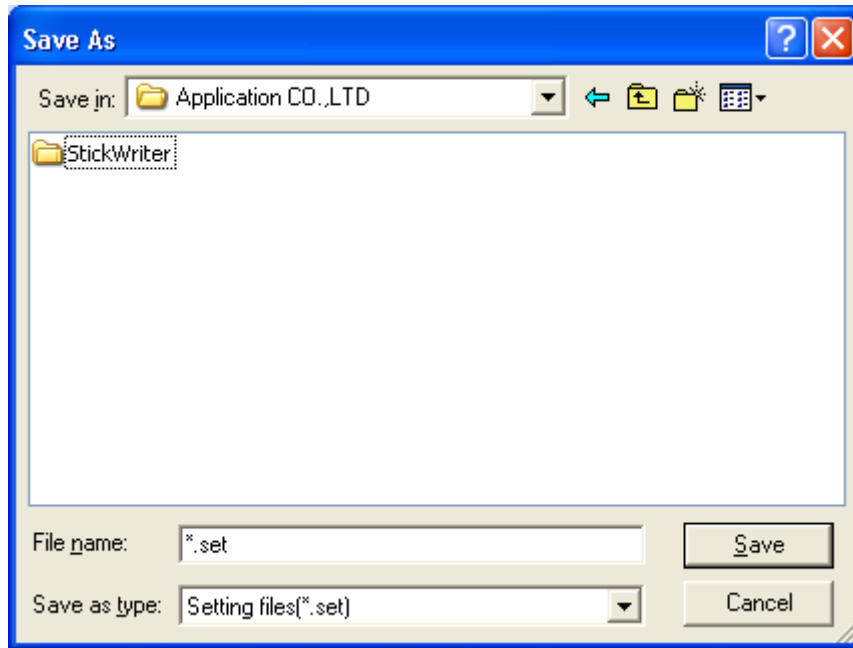


Fig 16

[Save]

Input a file name and press [Save] to start uploading.
The saved file can be downloaded from the [Setting File Download] menu.

[Cancel]

Closes the window without uploading the setting file.

(7) [Setting File Delete] Menu

Delete a setting file from a specified location in StickWriter.

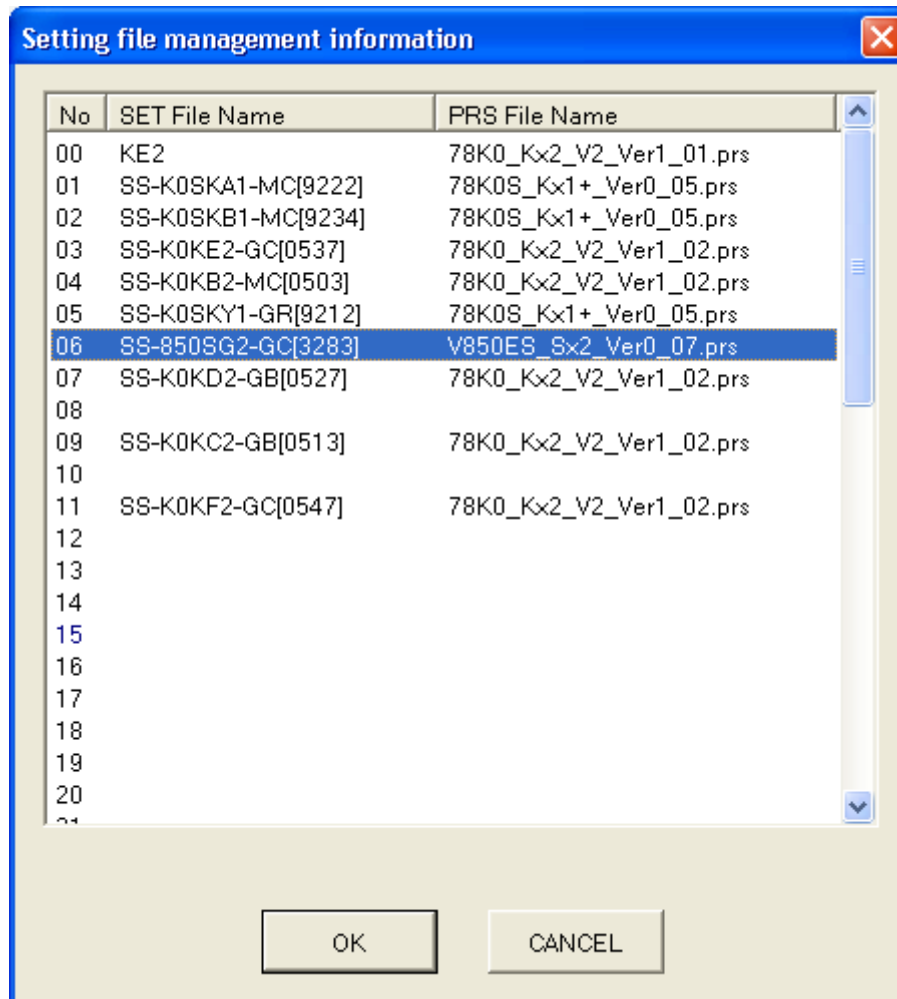


Fig 17

Select a number to delete and press [OK].



Fig 18

A confirmation window for the selected location will be displayed. Press [OK] to delete the

setting file. If the selected setting file is a default setting file, the setup information will be erased.

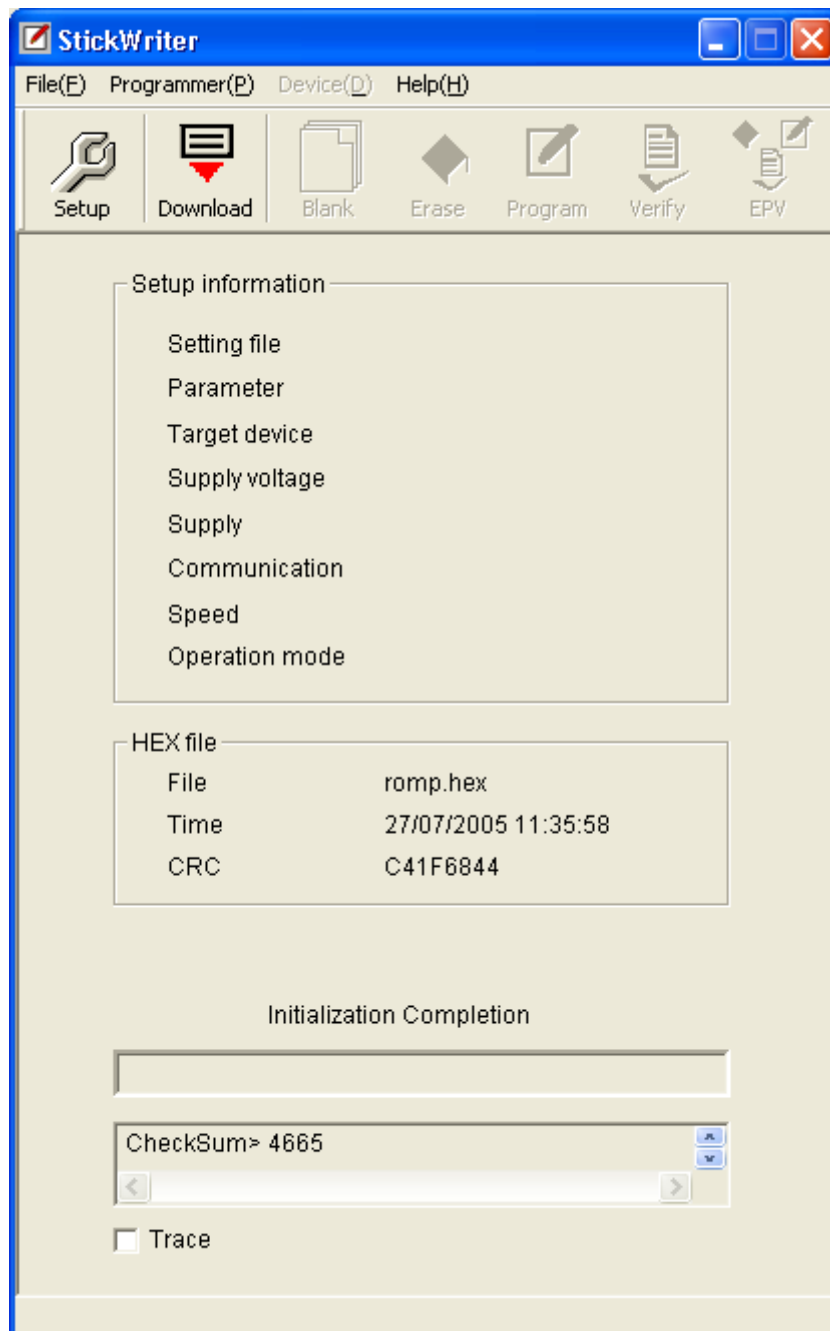



Fig 19

(8) [Application Exit] Menu

Exit the StickWriter GUI software. The user may also exit by clicking the  button on the right side of the task bar.

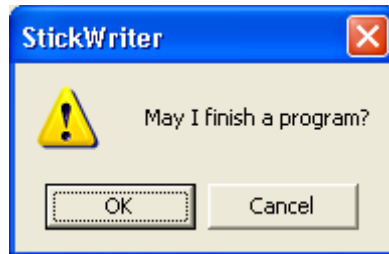


Fig 20

Press [OK] to exit the application. Press [Cancel] to cancel the exit.

4.3.2 [Programmer] Menu

Clicking on the [Programmer] menu displays a pull-down menu as shown below. The menu consists of a set of setup commands relating to programming.

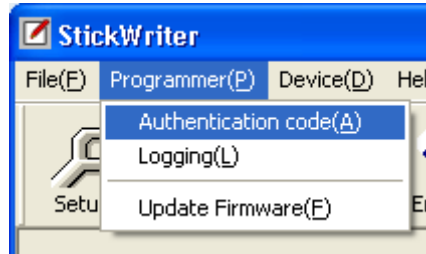


Fig 21

(1) [Authorization Code] Menu

Input the distributed authorization code to update the number of licenses for StickWriter.

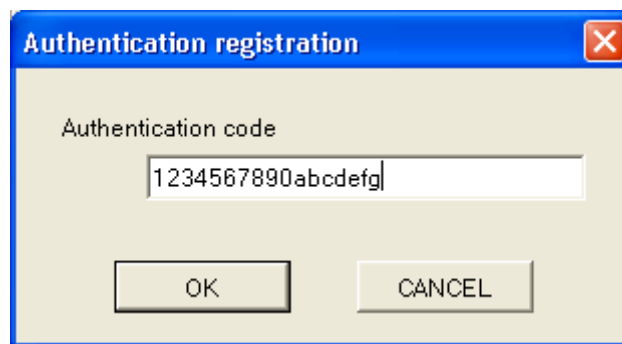


Fig 22

Input the authorization code and press [OK] to execute authorization.



Fig 23

When authorization is complete, the number of authorizations (the number of registered parameter files) and the number of licenses will be displayed.

(2) [Logging] Menu

Display and save the results of log records during stand-alone operation.

To enable the log history, the following three conditions must be met.

- A default setting file is registered.
- The “Log Record” is checked in the setup window.
- Any setting other than “No operation” is selected in the setup window for stand-alone operation.

Pressing [OK] in the Setup window will erase the log history information.

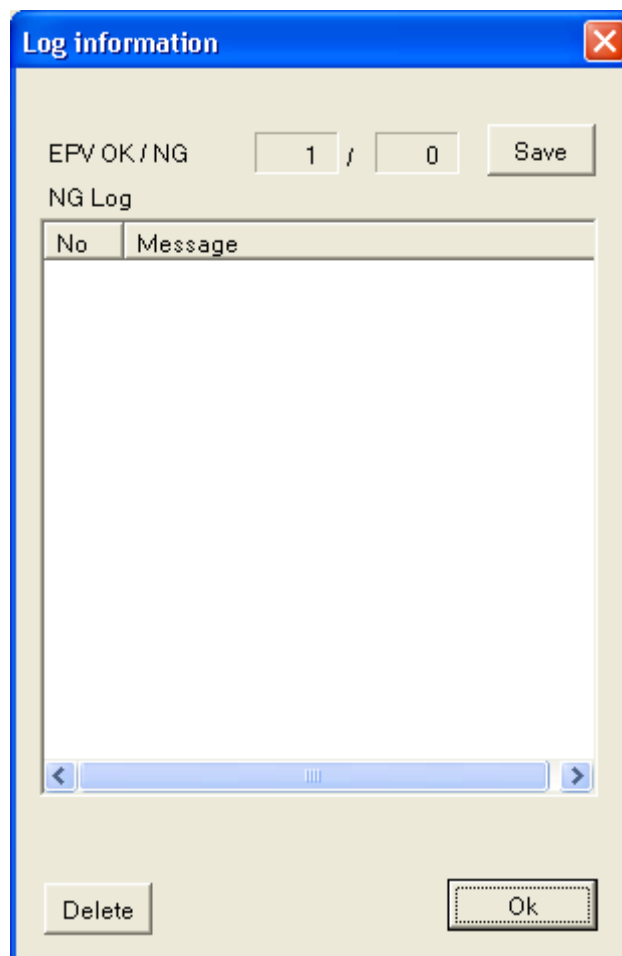


Fig 24

[Save]

After pressing [Save], the Input file name window will be displayed.

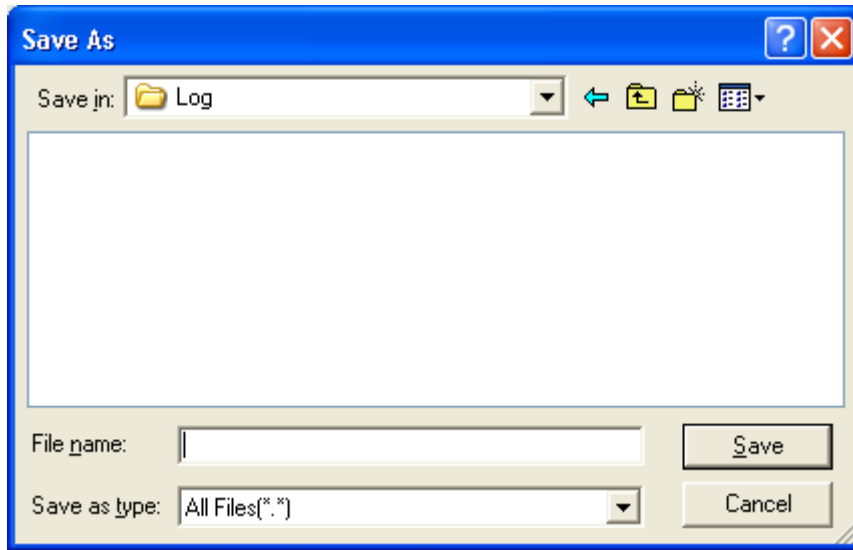


Fig 25

Input a name and press [Save] to create a file for saving the log history details.

Example of log history file contents

EPV OK/NG Count : 1 / 0

[Delete]

Deletes the displayed log history information.

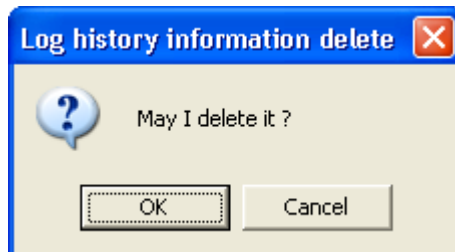


Fig 26

Press [OK] to delete the log history from the screen. Press [Cancel] to go back to Fig. 24 without deleting.

[OK]

Exits the log history window.

- (3) [pdate Firmware] Menu
Update the firmware program for StickWriter.

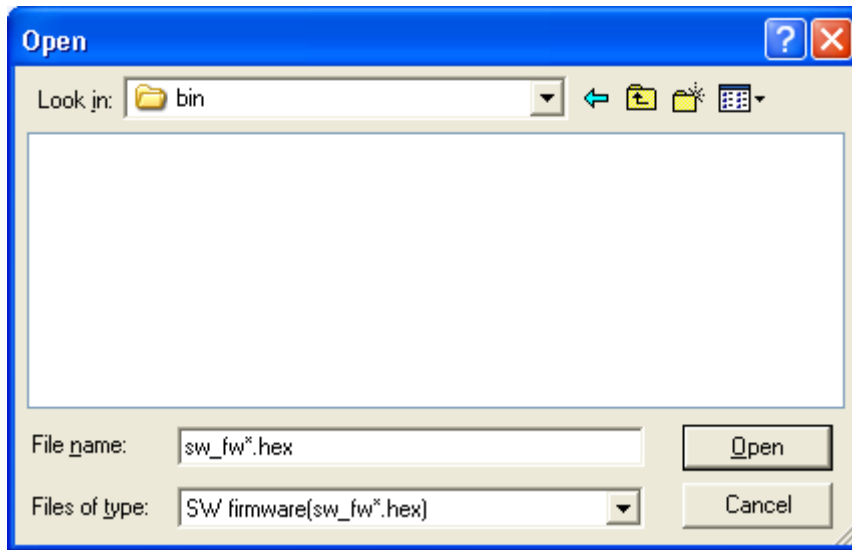


Fig 27

Input the file name and press [Open] to start downloading the firmware.

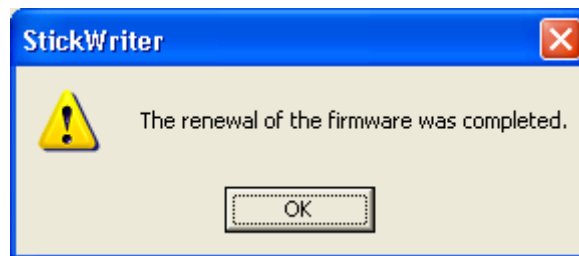


Fig 28

After the firmware program is successfully downloaded, the window shown in Fig. 28 will be displayed. Press [OK] to initialize StickWriter which will complete the process.

4.3.3 [Device] Menu

Clicking the [Device] menu displays a pull-down menu. The menu consists mainly of commands related to programming of the target device, such as deleting, programming and verifying.

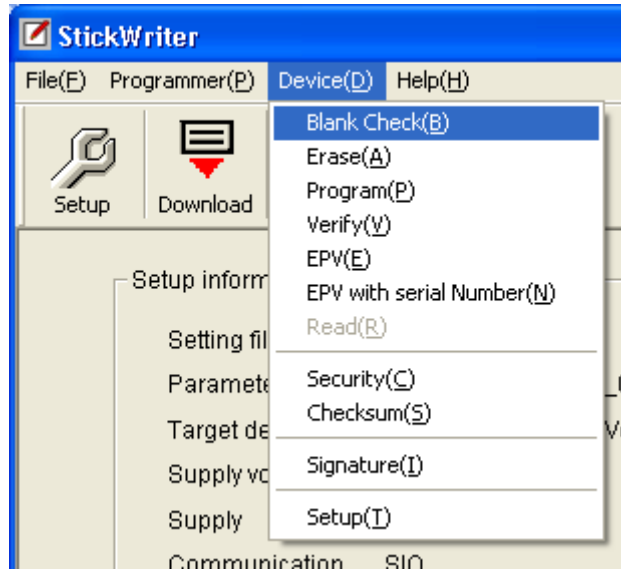


Fig 29

(1)[Blank Check] Command



Performs a blank check for the target device connected to StickWriter. If the flash memory in the target device has been erased, the blank check will finish successfully. If the flash memory has not been erased, an error message will be displayed.

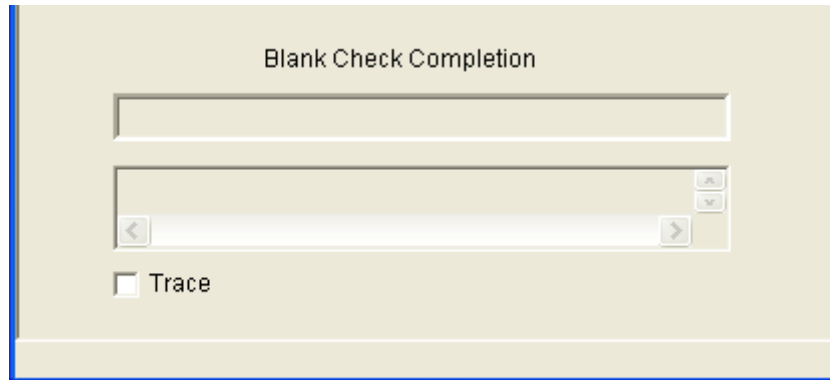


Fig 30

The status displayed when [Blank Check] finishes successfully.

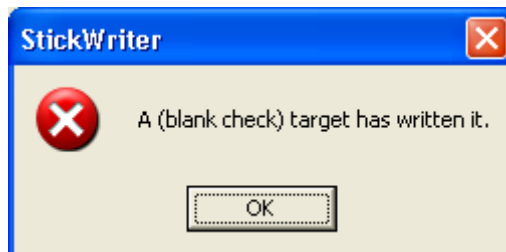


Fig 31

The window displayed if data has been written to the target device.

(2) [Erase] Command



Erases the flash memory of the target device connected to StickWriter. If “Blank check before Erase” is checked in the “Command options” of the [Setup] window, a blank check is performed before erasing. If the flash memory is blank, [Erase] will not be performed.

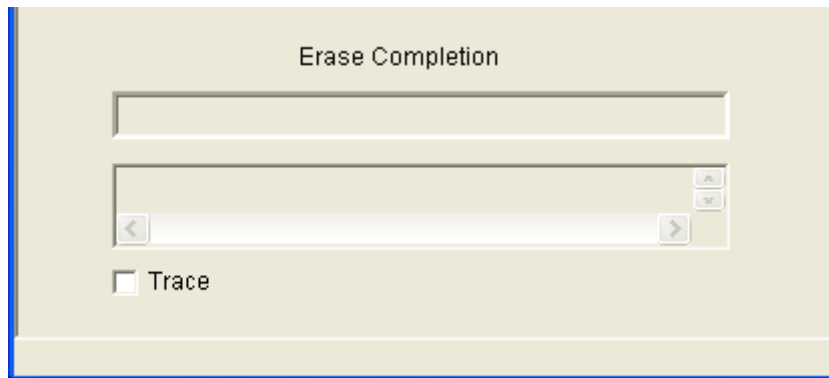


Fig 32

The status displayed when [Erase] finishes successfully.

(3) [Program] Command



The HEX file downloaded to the StickWriter is sent to the connected target device and is written to the flash memory. While writing, the progress status is displayed in the progress status display section and the programmer's operations are shown.

If "Read verify after Program" is checked in the "Command option" of the [Setup] window, "Read verify" will be performed after writing to memory is completed. If it is not checked, "Internal verify" will be performed.

If "Security flag set after Program" is checked, a security flag is written after the writing is completed.

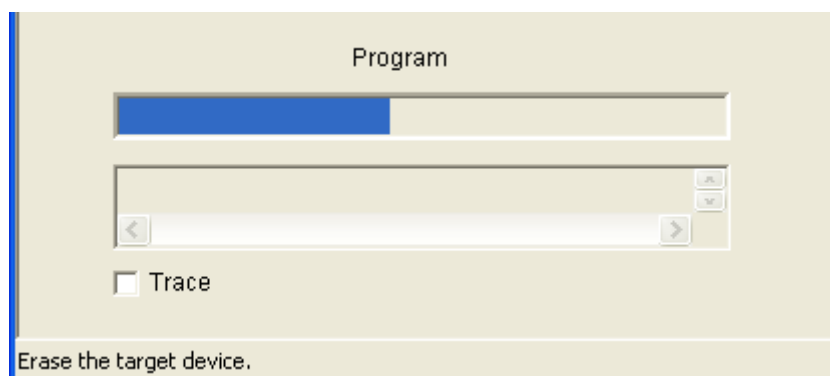


Fig 33

The writing progress status and Progress bar are displayed.

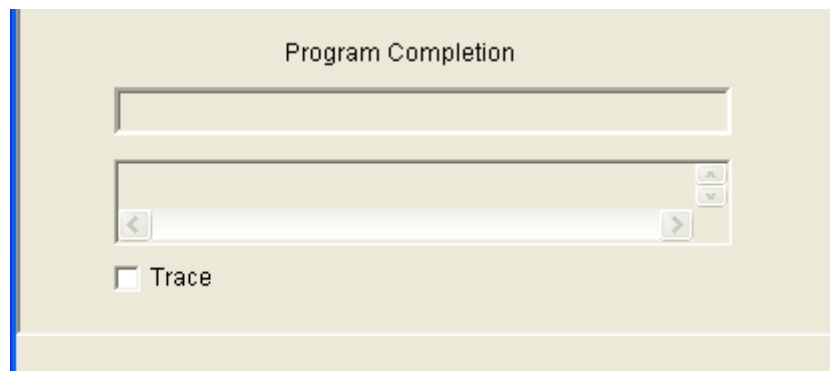


Fig 34

The status displayed when the program finishes successfully.

(4) [Verify] Command



Verifies the data written to the flash memory of the target device connected to the StickWriter and the data written to the flash memory in the StickWriter. While verifying, the progress status is displayed in the progress status display section and the programmer's operations are shown.

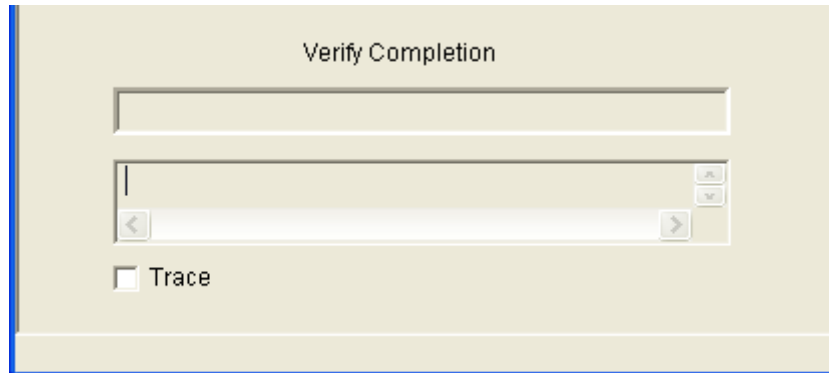


Fig 35

The status displayed when [Verify] finishes successfully.



Fig 36

The window displayed if [Verify] fails.

(5) [EPV] Command



Performs the [Erase] command, followed by the [Program] command for the target device connected to StickWriter. The options set in the “Command options” of the [Setup] window are also effective. During EPV, the progress status is displayed in the progress status display section and programmer’s operations are shown.

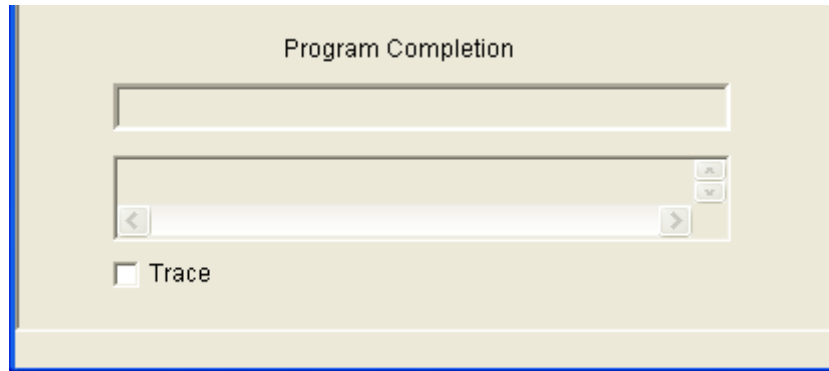


Fig 37

The status displayed when EPV finishes successfully.

(6) [EPV with Serial No.] Command

Operates the same as the [EPV] command; however, when the [EPV] button is pressed, data for the specified address size will be changed to the specified standard in the algorithm.

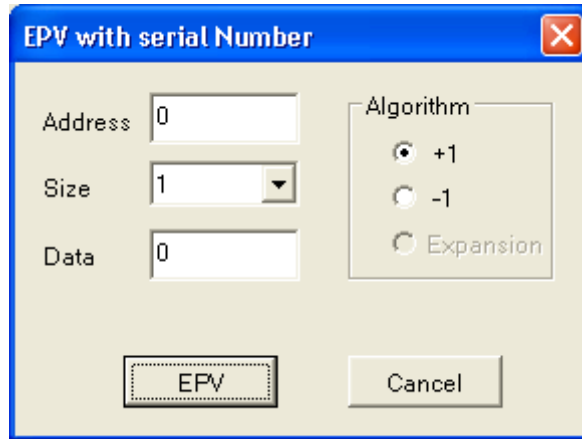


Fig 38

[Address]

The address where the changed data will be written

[Size]

The size of data: 1, 2 or 4 Byte(s) can be specified

[Data]

The data to be written; Input an initial value.

[Algorithm/+1]

When the [EPV] button is pressed, the data increases by one.

[Algorithm/-1]

When the [EPV] button is pressed, the data decreases by one.

[EPV] button

The EPV process is performed.


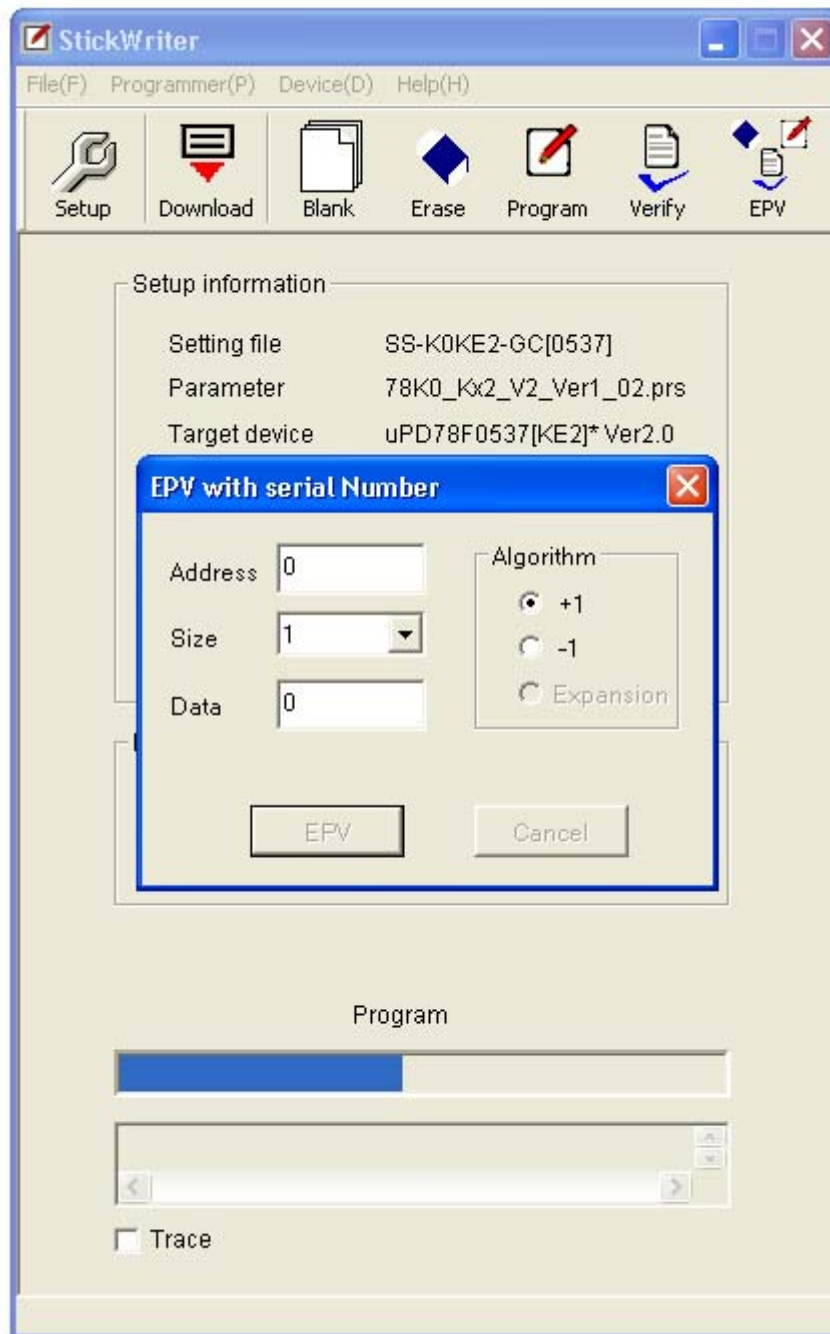


Fig 39

Fig. 39 shows the window displayed while [EPV with Serial No.] is executed.

(7) [Read] Command

Reads the contents of the flash memory in the target device connected to StickWriter.

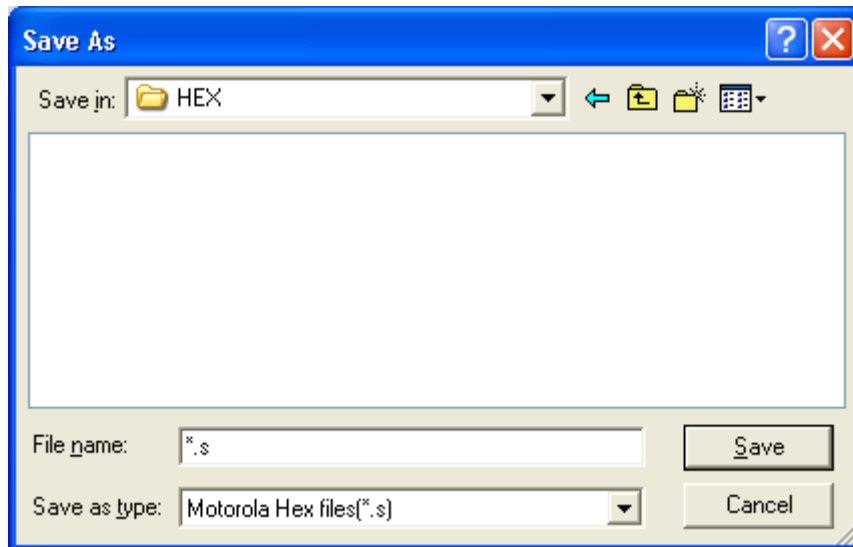

[Save]

Input a file name and press [Save] to start reading the flash memory. The save file format is only a Motorola, Inc. hex form.

[Cancel]

Closes the window without reading the content of the flash memory.

(8) [Security] Command

Writes a security flag to the target device connected to StickWriter.

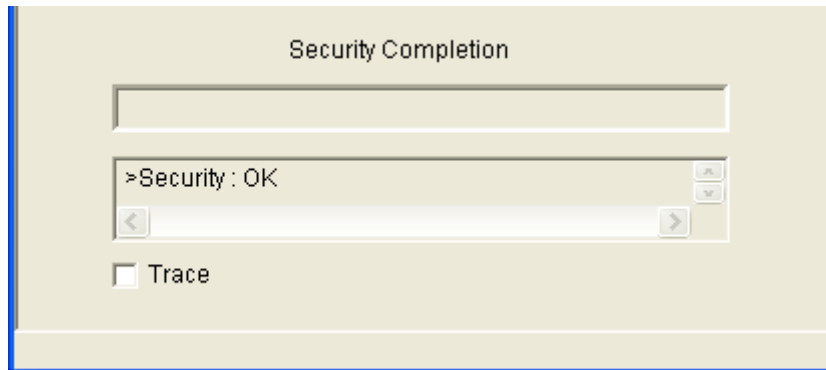


Fig 40

The status displayed when [Security] finishes successfully.

(9) [Checksum] Command

Reads and displays the checksum value of the target device connected to StickWriter. It does not compare the value to the data written in the flash memory of StickWriter.

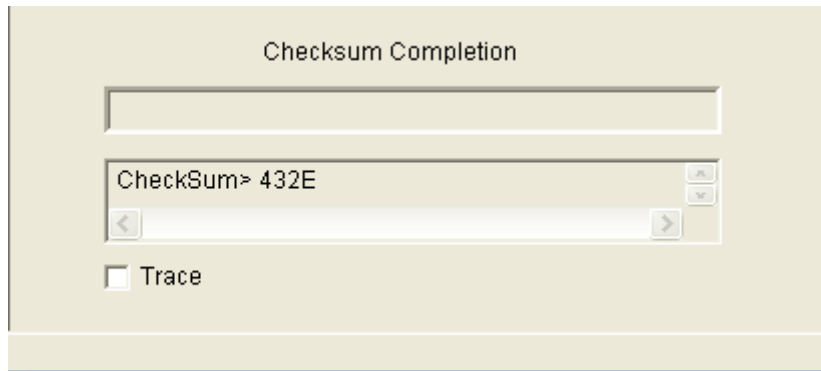


Fig 41

The status displayed when [Checksum] finishes successfully.

(10) [Signature] Command

Signature information on the target device connected with StickWriter and the device specified by the setup is compared.
(Signature information is not displayed.)

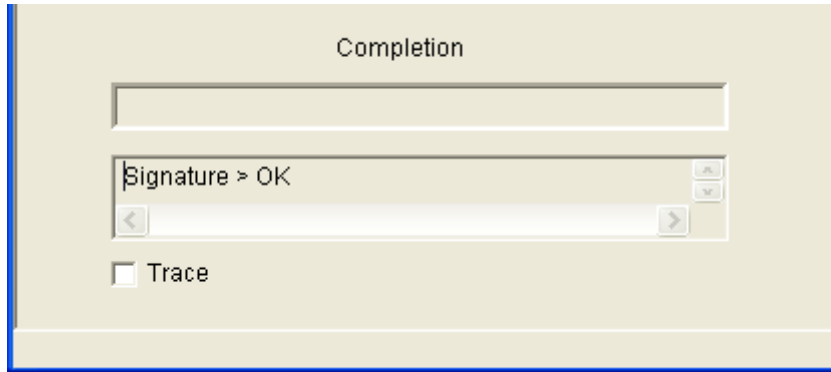


Fig 42

The status displayed when [Signature] finishes successfully.

(11) [Setup] Command

Performs setup for the flash memory rewrite settings according to the user environment, and for the command option settings. The updated content will be saved in the Settings file.

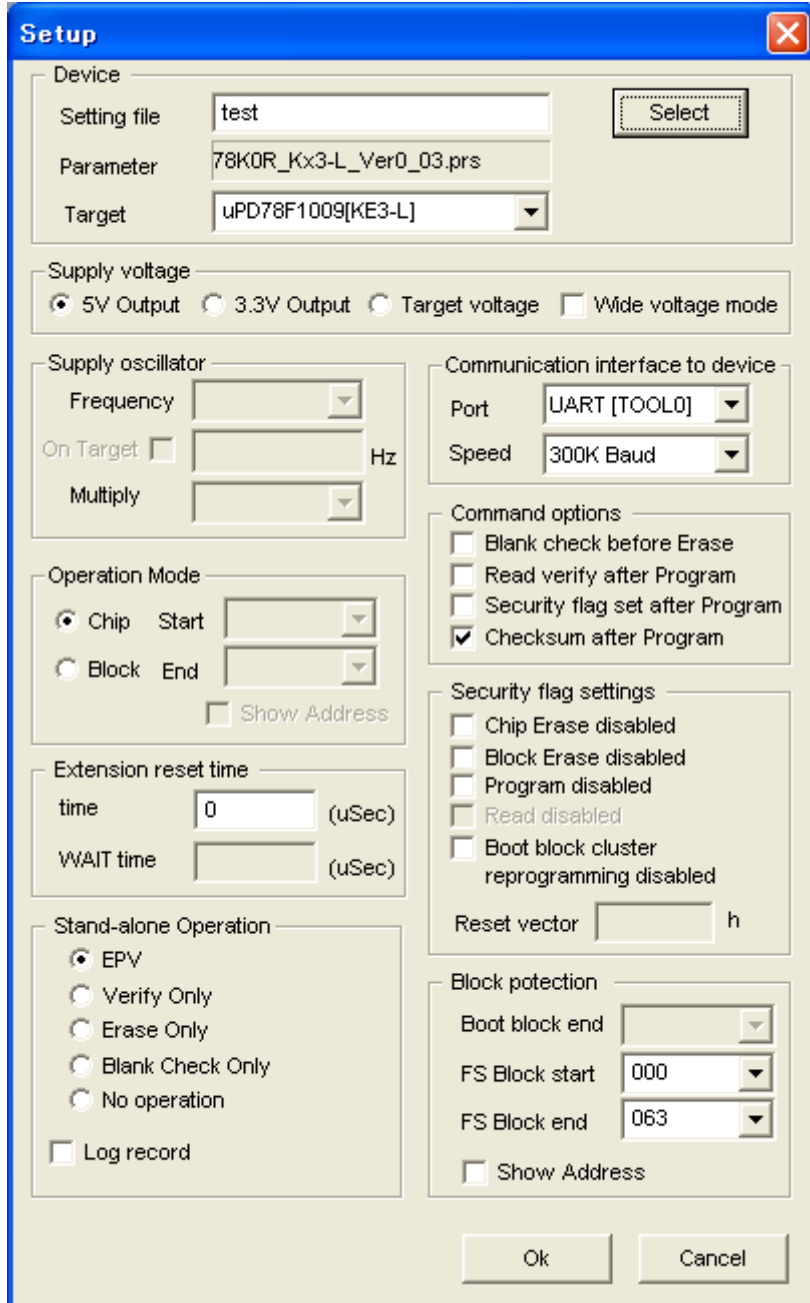


Fig 43


[OK]

Saves the parameter information with the Settings file name input by the user. (registered as the default settings file).

[Cancel]

Returns to [Launch] screen without saving.

[1] Device

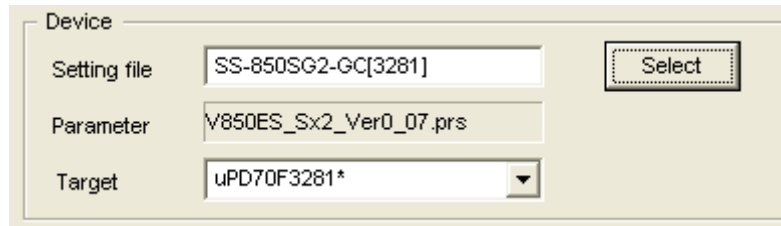

The image shows a software window titled "Device". It contains three input fields and a button. The "Setting file" field contains the text "SS-850SG2-GC[3281]". The "Parameter" field contains the text "V850ES_Sx2_Ver0_07.prs". The "Target" field is a dropdown menu currently showing "uPD70F3281*". To the right of the "Setting file" field is a button labeled "Select".

Fig 44

[Setting File]

The file containing Settings information saved in StickWriter. The file name can be changed.

Use the "Select" button to select other settings files or create a new file.

[Parameter File]

The file containing recorded device memory size and communication-timing information.

[Target Device]

A device can be selected for use from among the support devices recorded in the parameter file.

[Select] button

Displays the Setting file Management information window. (Fig 45)

The Setting file name and Parameter file name that were input in this window will be displayed in [Setting File] and [Parameter File].

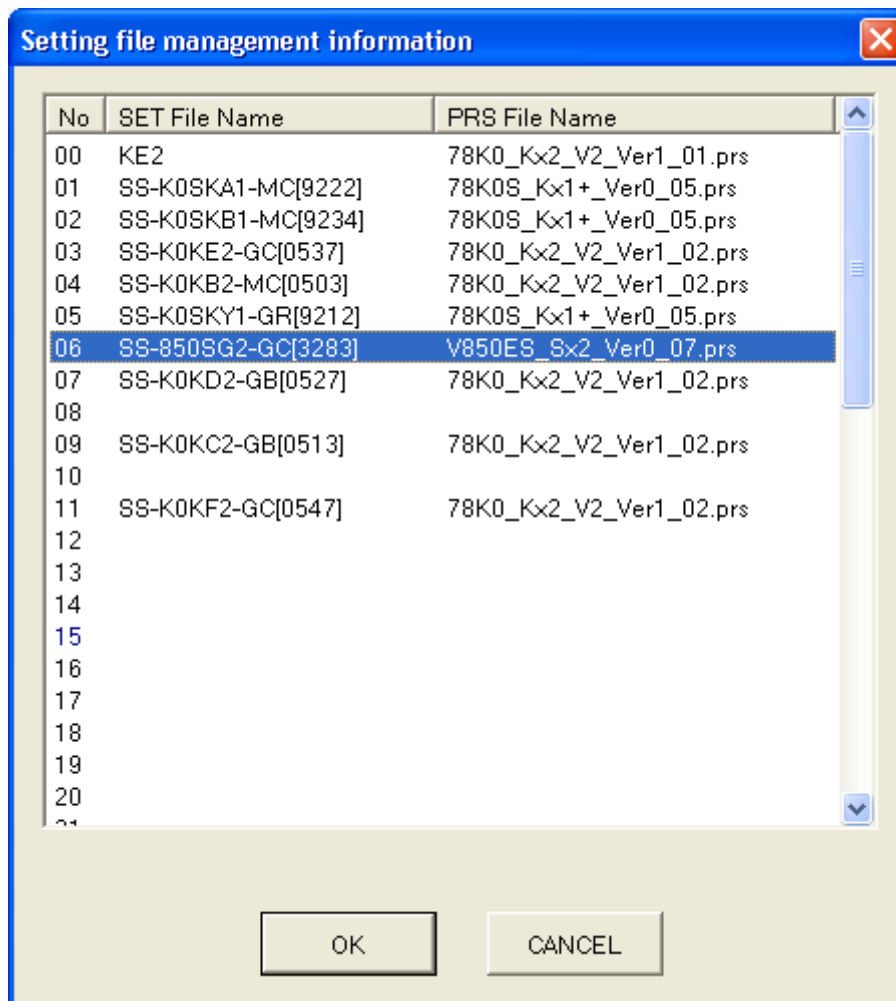


Fig 45

Setting file information from 00 to 49 can be newly registered or selected.

Double click a position on the line to register new information, or click on a position and press [OK] to select previous information.

If a previously registered number is selected, you will return to the Setup window.

If new information is created, the window shown in Fig. 46 is displayed.

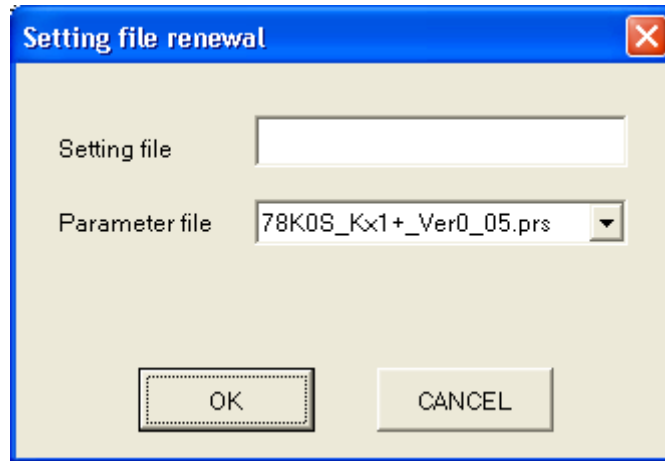


Fig 46

Input any Setting file name and select a Parameter file for the target device. Press [OK]. In the Parameter file list box, a list of previously registered parameter files will be displayed.

[2] Supply Voltage

This will set the voltage for communication with the target device.

Fig 47

| | |
|-------------------|---|
| 5V Output | Set to 5V for the USB. The same voltage is supplied to the target board. |
| 3.3 V Output | Set to 3.3 V for the power generated in StickWriter from the USB. The same voltage is supplied to the target board. |
| Target Voltage | Set to the target board voltage. |
| Wide voltage mode | When the check is put, each command is executed in a wide voltage mode. |

[3] Supply Oscillator

Sets the operating frequency for the target device.

Fig 48

| | |
|-----------|---|
| Frequency | Select the frequency to be supplied from StickWriter to the target device. Available frequencies are: 8MHz, 6MHz, 4MHz, 2MHz or 1MHz. |
| On Target | If a clock is supplied by the target board of the target device, input the supplied frequency here. |
| Multiply | If the target device supports multiplying, set the scale here. |

[4] Communication interface to device

Specifies the communication method between the target device and StickWriter.

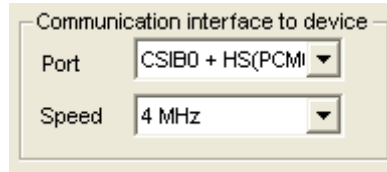


Fig 49

Port
Speed

Available communication methods are UART or CSI.
Communication speed can be selected.

[5] Operation Mode

Sets the type of commands to the target device.

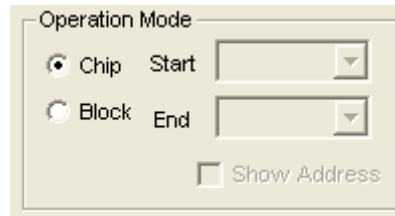


Fig 50

Chip
Block

Access in chip mode.
Access in block mode. In this case, Start block and End block can be specified. Or check Show Address to display the address.

[6] Command options

Options can be specified for each command to the target device.

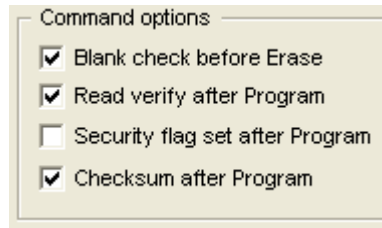


Fig 51

Blank check before Erase

Before executing the [Erase] command, the [Blank check] command is issued to confirm whether data has been erased. If it has been erased, [Erase] command will not be issued.

Read verify after Program

After data is written with the [Program] command, the written data will be re-sent for verification.

Security flag set after Program

After data is written with the [Program] command, a security flag will be written as specified by the Security flag setting.

Checksum after Program

After data is written with the [Program] command, the checksum value for the target device is received by the [Checksum] command for comparison.

[7] Security flag settings

Sets a security flag.

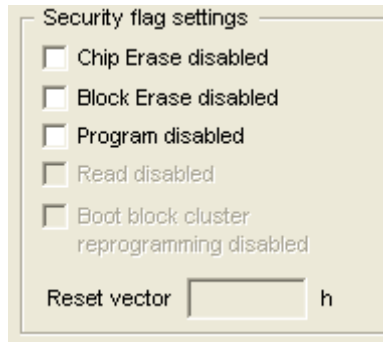


Fig 52

Chip Erase disabled

Disables [Erase]

Note: After the security flag is set to the target device, Erase or Write will not be allowed on the device.

Block Erase disabled

Disables [Block Erase].

Program disabled

Disables [Program].

Read disabled

Disables [Read].

Boot block cluster reprogramming disabled

Disables the Boot block updates.

Note: After the security flag is set to the target device, the boot area will not allow Rewrite on the device.

Reset vector

Changes the address to one with the reset vector specifications.

[8] Block protection

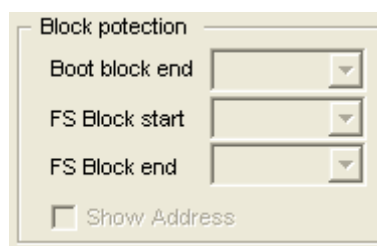


Fig 53

Boot Block end

The boot area is designated up to the specified block.

Note: After the security flag is set for the target device, the boot area will not allow Rewrite for the device.

FS Block start/FS Block end

Blocks other than the range specified here are rewritten by the flash memory self programming and lost.

[9] Extension reset time

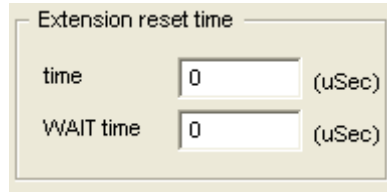


Fig 54

| | |
|-----------|--|
| Time | Extends the Reset time that was previously input. (Maximum 4 seconds) |
| WAIT Time | Extends the time between the cancellation of Reset and the issue of a new command. (Maximum 4 seconds) |

[10] Stand-alone Operation

Specifies an execution command when operating as a stand-alone device (without connecting to PC). Confirm that the “Target Voltage” is specified in the Supply voltage for stand-alone operation.

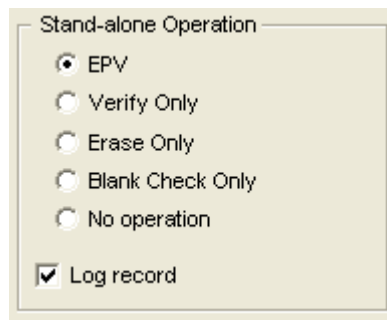


Fig 55

| | |
|------------------|------------------------------|
| EPV | Issues [EPV] command. |
| Verify Only | Issues [Verify] command. |
| Erase Only | Issues [Erase] command. |
| Blank Check Only | Issues [Blank Check] command |
| No operation | No command is performed. |

Check the “Log Record” for the number of devices written during stand-alone operation, the number of failed devices and error numbers for the failure (the last 32 histories), as recorded in the EEPROM built into StickWriter. The record details can be confirmed in the “Logging” of the “Device” menu.

4.3.4 [Help] Menu

Clicking the [Help] menu displays the following pull down menu.



Fig 56

(1) [About] Menu

Opens the window as shown below (Fig. 57).



Fig 57

Press [OK] to exit the window.

- F/W Ver : Firmware Version
- GUI Ver : GUI Program Version
- DLL Ver : DLL Version
- Serial No : 19-digit Serial Number
- License Count : Possible registration numbers for device parameters
- Registered Count : The number of registered device parameters

Chapter 5 Additional License

When first purchasing StickWriter, only one series of parameter files can be used; however, by purchasing additional license, additional parameter files can be added.

License Purchase Flow

